




ANGELICA


INSTALLATION INSTRUCTIONS

TYPE:


PROJECT NAME:

FINISHES
Diffuser textiles


-  Cotton
-  Washable
-  Wool

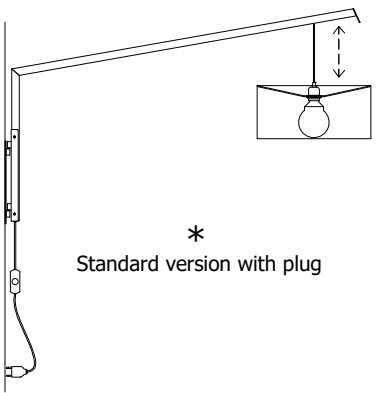


*
Standard version with plug

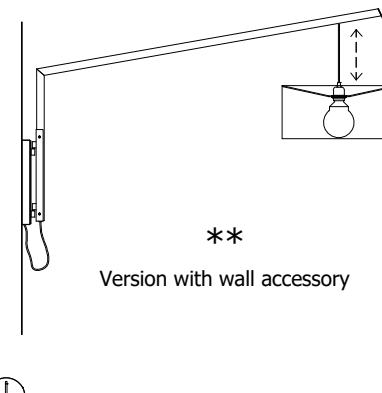

**
Version with wall accessory



OFF

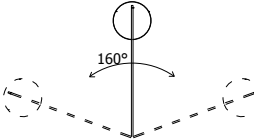

160°

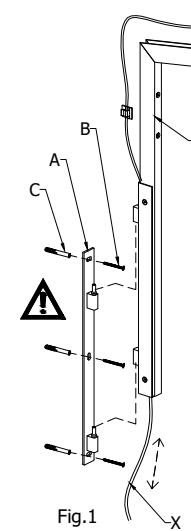


Fig.1

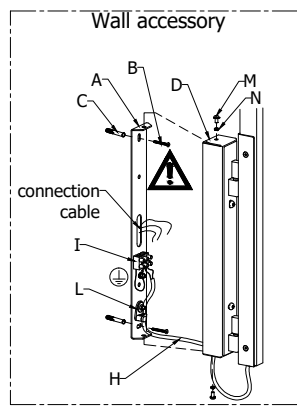


Fig.2

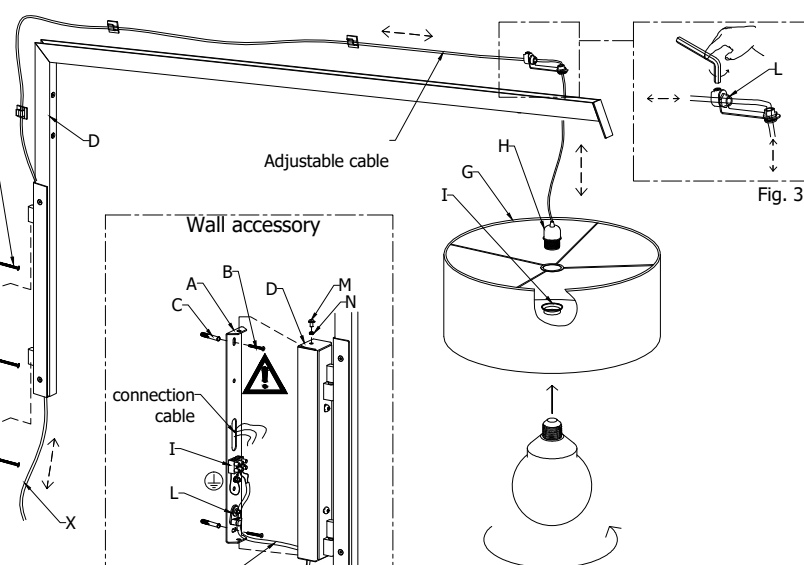


Fig. 3

INSTRUCTION

- Disconnect the power source (X).

STANDARD ASSEMBLY (FIG. 1)

- Fix the bracket (A) with screw (B) and dowels (c) to the wall.
- Attach the frame (D) to the bracket (A).


ASSEMBLY WITH WALL ACCESSORY (FIG. 2)

- Fix the bracket (A) with screws (B) and dowels (C) to the wall.
- Connect the wires into the terminal (I) according to polarity.
- Lock the cable (H) in the block (L) .
- Fix the canopy (D) to the bracket (A) with two screws (M) and two washers (N) .
- Attach the lampshade (G) to the holder (H) by turning the knob (I).
- Adjust the shade Height by fixing the cable clamp's screw (L) and by scrolling the electrical cord into the aluminum profile. (Fig. 3)

WEIGHT
Kg 5 / 4.41 lb

ATTENTION
The products of our production are suitable for the using in usual surroundings with standard temperature and humidity levels.
All the operations have to be done by a technician.

CLEANING
Switch off the power or pull the plug out.
For the periodical cleaning of the lamp use always gloves and a soft cloth (for glossy surfaces) or a feather duster for the lampshade in fabric or pleated fabric. Don't use aggressive solvents or alcohol.
Avoid absolutely to fold parts which are not expected for folding, in this case welded parts are going to be damaged.



1 X E27 max 70W