


# HOOP™ CEILING

INSTALLATION SHEET

TYPE:

PROJECT NAME:

## hoop ceiling

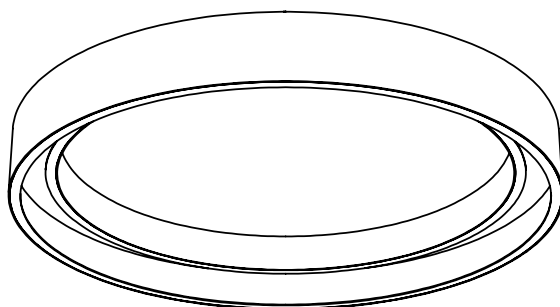

### HOOP 950 CEILING 16W



### HOOP 600 CEILING 25W



### HOOP 950 CEILING 45W



 
### HOOP 600 CEILING 50W



### HOOP 950 CEILING 90W



### HOOP 950 CEILING 90W RGB



INSTALLATION SHEET

**Luminart®**


WWW.LUMINARTLIGHTING.COM  
Last updated: 6/25/19

# HOOP™ CEILING

## INSTALLATION SHEET

TYPE:

PROJECT NAME:

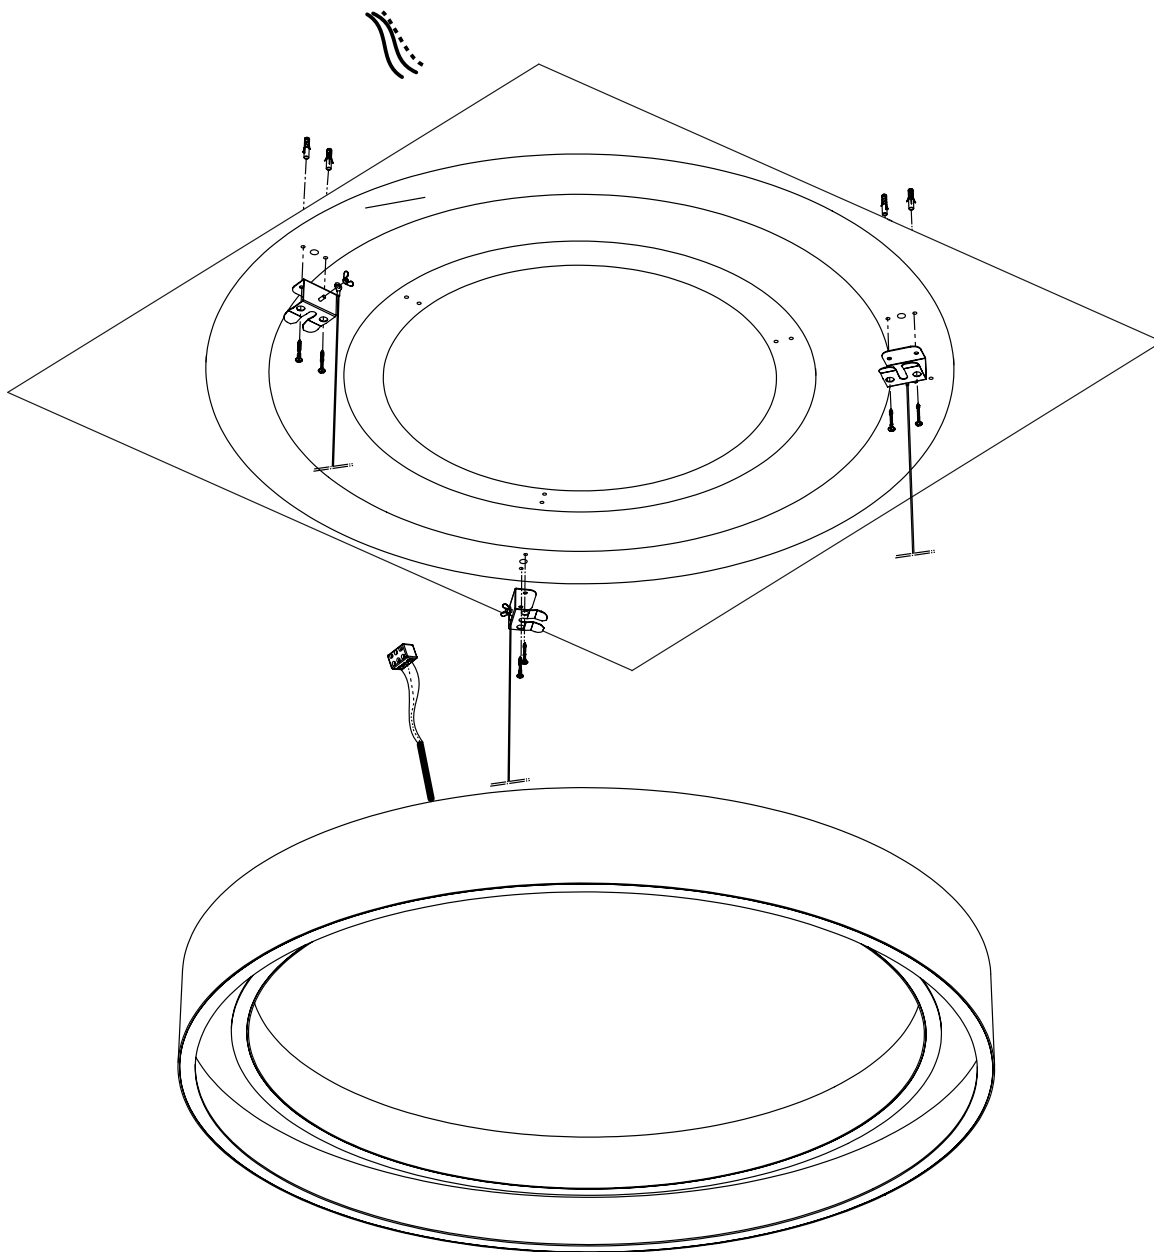

INSTALLATION SHEET

**General installation and maintenance directives concerning factory guarantee.** Connecting and testing the lamps must always happen by an acknowledged electrician according to the locally applying regulations on electric installations. Do not place on a flammable surface. All class I lamps must be earthed in the cable clamp marked with a Ⓢ-sign. Class II lamps may not be earthed. Disconnect from the main supply when fitting lamp or changing bulb. This lamp satisfies to the low tension directive 73/23/EEG with modification 93/68/EEG and the EMC directive 89/336/EEG with modifications 92/31/EEG and 93/68/EEG.

**Luminart®**

WWW.LUMINARTLIGHTING.COM  
Last updated: 6/25/19