

The inner lampshade of all set and models is placed on an articulated joint which allow a slight inclination in all direction to have a perfect balance of the swinging lamp.

INSTRUCTION

- Disconnect the power source.
- Unscrew the handle (A) and lower the canopy (B). (FIG.1)
- Fix the bracket (C) with screw (D) and dowels (E) on the ceiling. (FIG.1)
- Adjust the length of the steel cable acting on regulating terminal security (G), push the part (B) of the gripper so that the steel cable runs. (FIG.1)
- Connect the network cables to terminal (F) according to the polarity, and close the box. (FIG.1)
- Tense the power cable paying attention to the regulation , it doesn't have to be too tensed
- Place the canopy in the ceiling. Screw with care the particular (A), the block cable (G).(FIG.2)
- Screw the safety screw (K) (Fig.2).

- Put the lampshade on the threaded lamp socket (H).
- Screw the ring nut (L) to the lamp socket (H) until the lampshade (I) stops.

ATTENTION


The products of our production are suitable for the using in usual surroundings with standard temperature and humidity levels. All the operations have to be done with the power off.

CLEANING

Switch off the power or pull the plug out.

For the periodical cleaning of the lamp use always gloves and a soft cloth. Use spray for glasses or all-purpose.

Avoid absolutely to fold parts which are not expected for folding, in this case welded parts are going to be damaged.

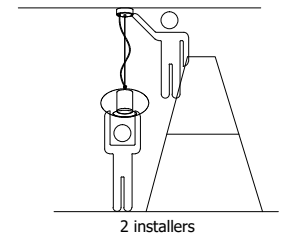

WEIGHT
 ø60 Kg 3 / 6.61 lb
 ø80 Kg 5 / 11.02 lb