

### INSTRUCTION

- Switch off the power or pull the plug out.
- Fix the bracket (A) with screws (B) and dowels (C) on the ceiling (Fig. 1).
- Connect the network cables on the device (E) by checking the polarity and close again the box (D) (Fig. 1).

### DIMMABLE VERSION

- Connect the network cable on the clamp (E1) according to the polarity.
- Close the ceiling rose (G) by screwing the screws (F), the washer (J) to the bracket (A) (Fig. 1).
- Hang up the three steel cables to the ceiling rose.
- To regulate the position of the lamp completely unscrew the detail (I) and take out the cylinder cable lock (L); regulate the cables, then close again the pin (I) and cut the cable in excess (Fig. 2).
- Position the plate (M) on the lampshade support (N); pass the steel cables (H) into the slots of the plate; fix the plate to the lampshade with three screw (O) (Fig. 3 - 4).
- Insert the Bulbs on the lamp sockets.
- Place the bottom cover (P) on the three brackets (N) through the openings (Fig. 5 - 6 - 7).
- Make sure the bottom cover support on the three brackets.

### ATTENTION


The products of our production are suitable for the using in usual surroundings with standard temperature and humidity levels.  
All the operations have to be done by a technician.

### CLEANING

#### Switch off the power or pull the plug out.

For the periodical cleaning of the lamp use always gloves and a soft cloth (for glossy surfaces) or a feather duster for the lampshade in fabric or pleated fabric.

Don't use aggressive solvents or alcohol. Avoid absolutely to fold parts which are not expected for folding, in this case

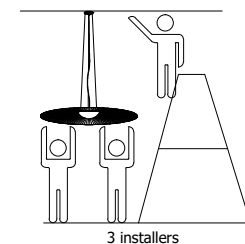

3 installers

WEIGHT	
ø150	Kg 10 / 22.04lb