
Connecting and testing the lamps must always be done by an acknowledged electrician according to the locally applying regulations on electric installations. Do not place on a flammable surface. Disconnect from the main supply

when fitting lamp or changing bulb.

Fixture mounts to a standard junction box (not supplied).

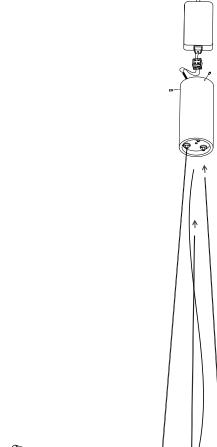

black inner core: mantle: +



