

INSTALLATION INSTRUCTIONS

## **BOUNCE S 120**

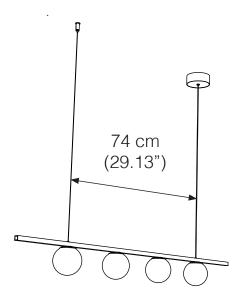


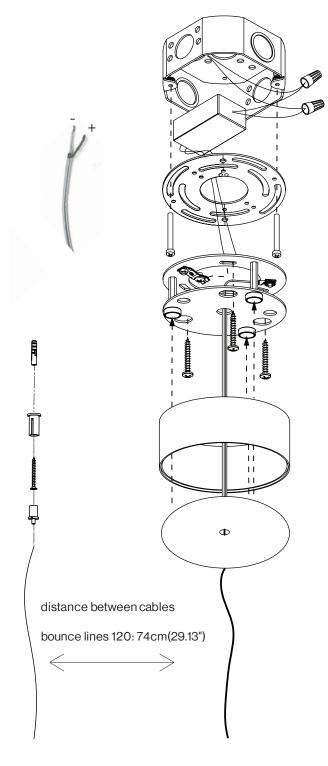


CLEANING: only use a dampened soft cloth, no aggressive cleaning detergent or solvents with alcohol and chemicals.



## **BOUNCE M 120**

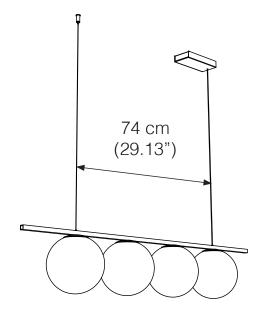

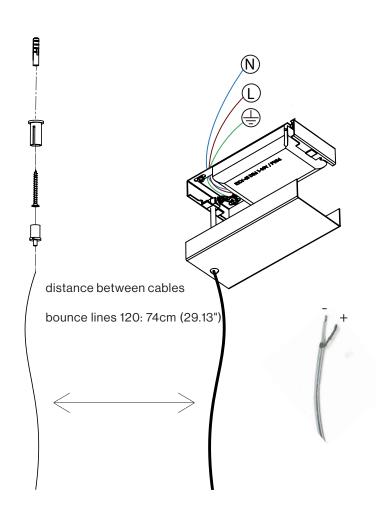

CLEANING: only use a dampened soft cloth, no aggressive cleaning detergent or solvents with alcohol and chemicals.

## 67 cm **BOUNCE L 180** (26.37")67 cm (26.37")distance between cables bounce lines 120: 74cm (29.13") bounce lines 180: 67cm(26.37") bounce lines 180: 67cm (26.37")

CLEANING: only use a dampened soft cloth, no aggressive cleaning detergent or solvents with alcohol and chemicals.

