

INSTALLATION INSTRUCTIONS

- **Disconnect the power supply.**
- **Unpack taking care not to damage the lampshade and/or the joint because the projector stem is free to move.**
- [FIG.1]
 - Screw the caps (J) of the suspension cables (L) to the 3 corresponding threaded supports (K), but do not tighten them. The slots on the caps (J) for the suspension cables (L) must be free to rotate to align with the central axis of the lampshade (M). [FIG.2]
- Adjust the position of the projector (D) and tighten the 3 fixing screws (H) of the closing cover (G) using a hexagonal key. [FIG.3]
- Disassemble the canopy (N) by unscrewing the conical cable clamp (P) and the 4 screws (Q) from the ceiling fixing bracket (R). [FIG.4]
- Fix the bracket (R) to the backplate using appropriate dowels and screws. Fix the backplate to the crossbar and junction box. [FIG.6]
- Insert the electric cable (S) first into the cable clamp (P) and then into the appropriate hole on the rose (N). [FIG.4]
- Connect the electrical system cables to the electrical cables of the light fixture using the appropriate splicing connectors (T), respecting polarity. [FIG.4]
- Place the canopy (N) close to the ceiling and tighten the 4 screws (Q) to the bracket (R) using a hexagonal key. [FIG.4]
- Screw the conical cable clamp (P) to the canopy (N). [FIG.4]
- Adjust the position of the clamps along the suspension cables (L) to find the correct position of the lampshade. [FIG.5]
- Make sure to tighten both screws on the clamps (U) using a screwdriver. [FIG.5]
- If necessary, cut the excess portion (V) of suspension cable using diagonal cutting pliers. [FIG.5]
- Insert the suspension cables (L) into the 3 corresponding slots on the canopy (N). [FIG.4]
- Let the suspension cables (L) slide moderately by gravity until the clamps (U) at the ends are hooked to the canopy (N). [FIG.4]
- Make sure that the clamps (U) are actually hooked to the canopy (N) and check that the caps (J) are screwed on, but not tightened. [FIG.4 + FIG.2]
- Install the bulbs and insert the light breaker (W) at the bottom of the projector. [FIG.3]

ATTENTION


The lighting fixtures produced by us are suitable for use in ordinary environments with standard ambient temperature and relative humidity. All operations must be carried out by a specialized technician.

CLEANING

Disconnect the power supply or unplug from the socket.

For periodic cleaning of the lighting devices, always use gloves and a soft cloth (in case of smooth surfaces). Never use solvents or alcohol.

Absolutely avoid bending parts not intended for their mobility as this could weaken or break them.

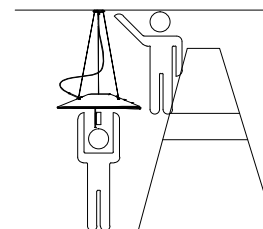

2 installers

WEIGHT
12 Kg / 26.45 Lbs