

## REMOTE DRIVER- INSTALLATION INSTRUCTIONS PROJECT NAME:

#### INSTALLATION FLUSH MOUNT RECESSED WITH BACK BOX - REMOTE DRIVER

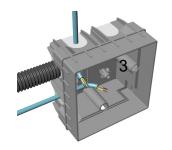

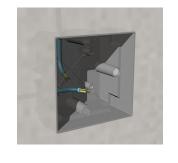





5



Α

3

With the backbox they are supplied in a bag (S): -2 fixing clips for the fixture that must be kept in a safe place and used for its installation.

4


- Remove the cover. [1]
- Open the cable passages where necessary. [2]
- Imbed the backbox, aligning the edge with the wall taking into account any plaster. [3-4]
- Screw the cover to protect the interior from mortar or cement, until the moment of installing the fixture, using the screws supplied. [5]

(NOT INCLUDED)

CONDUIT




Insert a conduit (not included) in the appropriate knock out.

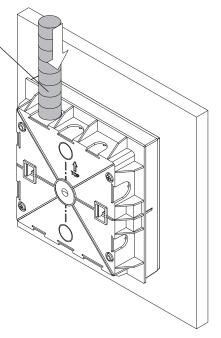

## REMOTE DRIVER- INSTALLATION INSTRUCTIONS PROJECT NAME:


#### INSTALLATION FLUSH MOUNT RECESSED WITH BACK BOX - REMOTE DRIVER

TYPE:

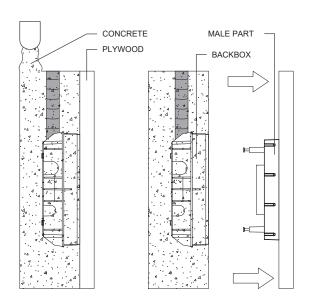


С


Pour concrete in the formwork where the back box is placed. Wait for the concrete to dry. When removing the formwork, pull the male part off of the back box.

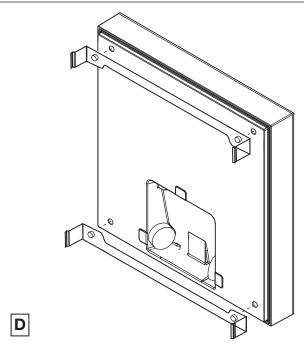

Install 2 x bracketS (included) to the fixture.

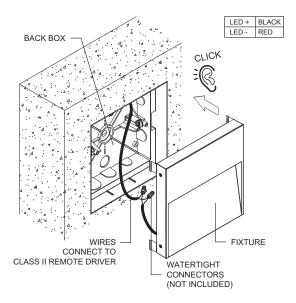

Make wire connections to the class II remote driver using watertight connectors (not included). Push the fixture in the back box untilt it clicks in place.

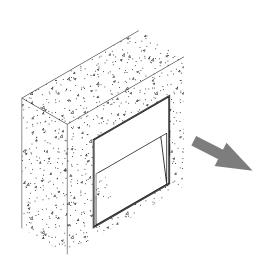

To remove fixture, just pull outwards.


F

INSTALLATION SHEET

Е




# REMOTE DRIVER- INSTALLATION INSTRUCTIONS PROJECT NAME:

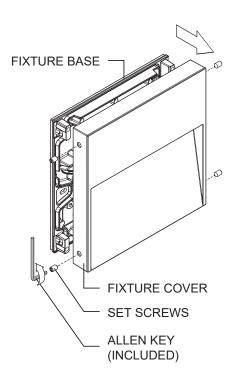

G

**TYPE:** 

To check the wire connections in the fixture, unscrew the 4 set screws with an allen key to remove the fixture cover from the fixture base.

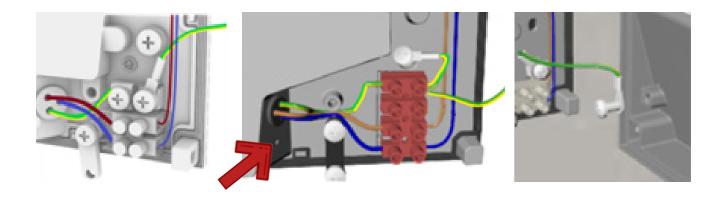

Н

Details of the wire connections inside the fixture.