

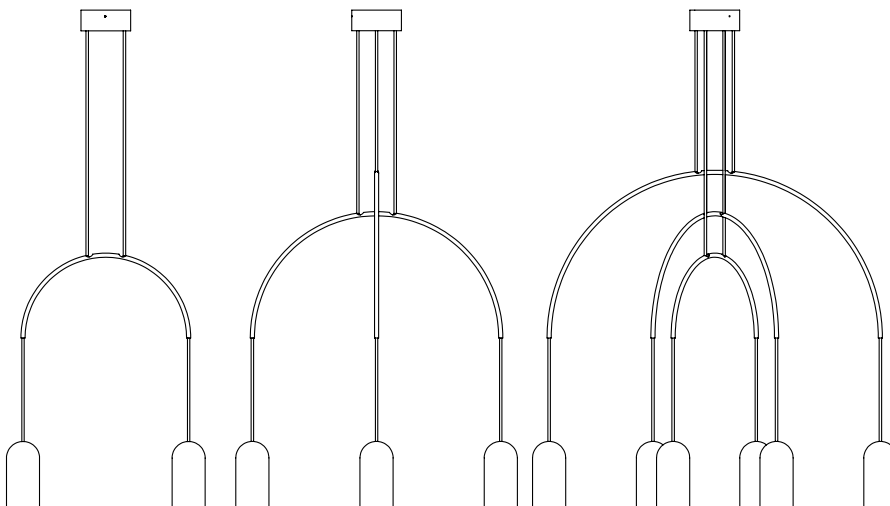
BOW™

INSTALLATION SHEET



TYPE:

PROJECT NAME:

bow I, II, III



bow I



		E26	120V	2x15W		
--	--	-----	------	-------	---	---

black painted

bow I S
bow I M
bow I L

T97H1IZL
T97H2IZL
T97H3IZL

bow III



		E26	120V	6x15W		
--	--	-----	------	-------	---	---

black painted

bow III S+M+L

T97H7IZL

bow II

		E26	120V	4x15W		
--	--	-----	------	-------	---	---

black painted

bow II S+M
bow II M+L
bow II L+S

T97H4IZL
T97H6IZL
T97H5IZL



INSTALLATION SHEET

Luminart®

WWW.LUMINARTLIGHTING.COM
Last updated: 3/6/20

SUSPENDING THE BOW

SUSPEND THE BOW AND ADJUST AS REQUIRED.

WIRING AND CANOPY INSTALLATION

- A- ADJUST THE POWER CABLE LENGTH TO POSITION. CUT THE CABLE SURPLUS.
- B- RAISE THE CROSSBAR AGAINST THE CEILING AND FASTEN TO THE JUNCTION BOX USING (2) MOUNTING SCREWS.
- C- MAKE ALL NECESSARY CONNECTIONS (**FOLLOWING WIRING DIAGRAM AND POLARITY MARKING**) USING THE TWIST CONNECTORS (NOT INCLUDED). MAKE THE CONNECTION FIRST AND INSTALL THE CROSSBAR AFTER.
- D- PLACE THE CANOPY OVER THE CROSSBAR AND SECURE ASSEMBLY IN PLACE WITH (2) SCREWS.

