


THIN & THIN BIG

INSTALLATION SHEET


TYPE:

PROJECT NAME:

thin & thin big

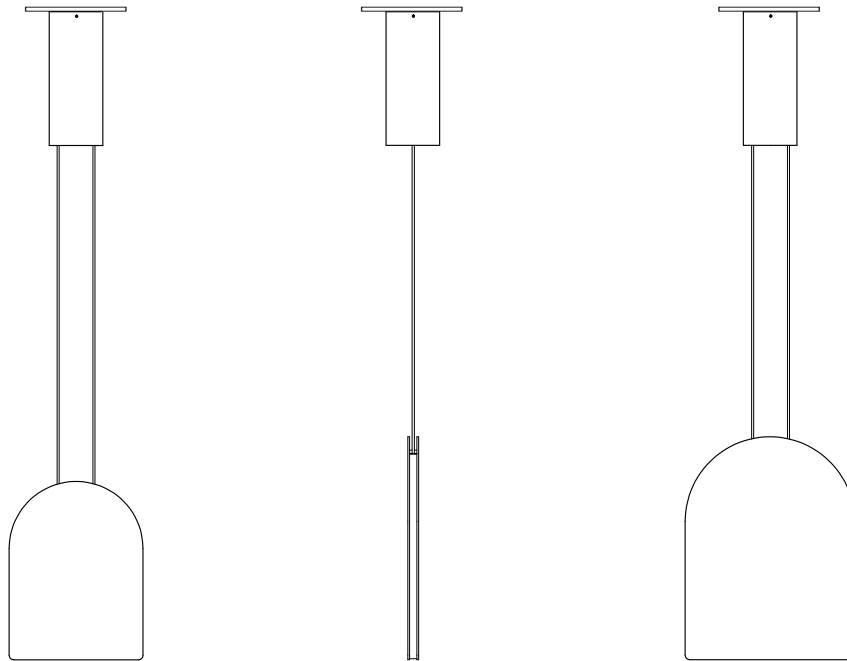

thin



black painted
white painted

T99H1DZL
T99H1DWL

thin big



black painted
white painted

T99H2DZL
T99H2DWL

INSTALLATION SHEET



THIN & THIN BIG

INSTALLATION SHEET

TYPE:


PROJECT NAME:

SUSPENDING THE THIN

SUSPEND THE THIN WITH THE TWO STEELCABLES. ADJUST AS REQUIRED.

WIRING AND CANOPY INSTALLATION

- A- ADJUST THE POWER CABLE LENGTH AND TIGHTEN THE POWER GRIP, TO LOCK POSITION. CUT THE CABLE SURPLUS.
- B- RAISE THE CROSSBAR AGAINST THE CEILING AND FASTEN TO THE JUNCTION BOX USING (2) MOUNTING SCREWS.
- C- MAKE ALL NECESSARY CONNECTIONS (**FOLLOWING WIRING DIAGRAM AND POLARITY MARKING**). MAKE THE CONNECTION FIRST AND INSTALL THE CROSSBAR AFTER.
- D- PLACE THE CANOPY OVER THE CROSSBAR AND SECURE ASSEMBLY IN PLACE WITH (2) SCREWS.

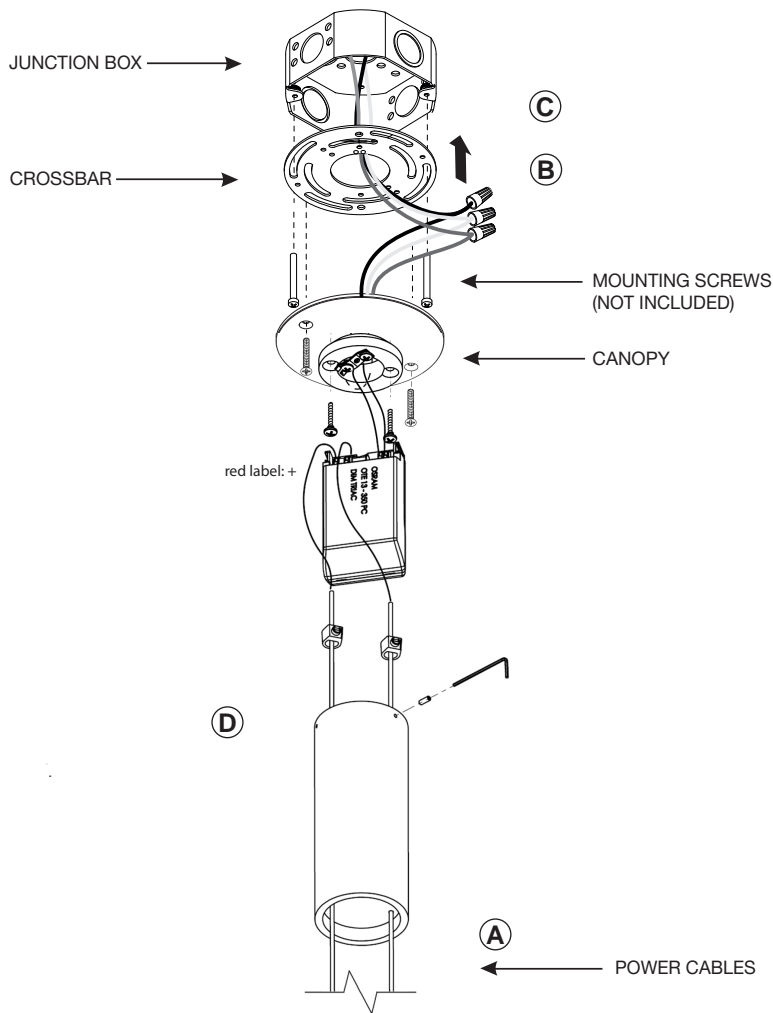

INSTALLATION SHEET

General installation and maintenance directives concerning factory guarantee. Connecting and testing the lamps must always happen by an acknowledged electrician according to the locally applying regulations on electric installations. Do not place on a flammable surface.

Luminart[®]

WWW.LUMINARTLIGHTING.COM

Last updated: 3/12/20