


SHUFFLE™ RECESSED

INSTALLATION INSTRUCTIONS

TYPE:

PROJECT NAME:

- A- INSERT THE LED DRIVER INSIDE THE CEILING CUT-OUT
(DRIVER INSTALLATION INSTRUCTION ON NEXT PAGE).
- B- HOLD THE CLIPS UPWARD AND INSERT FIXTURE INTO CUT-OUT.

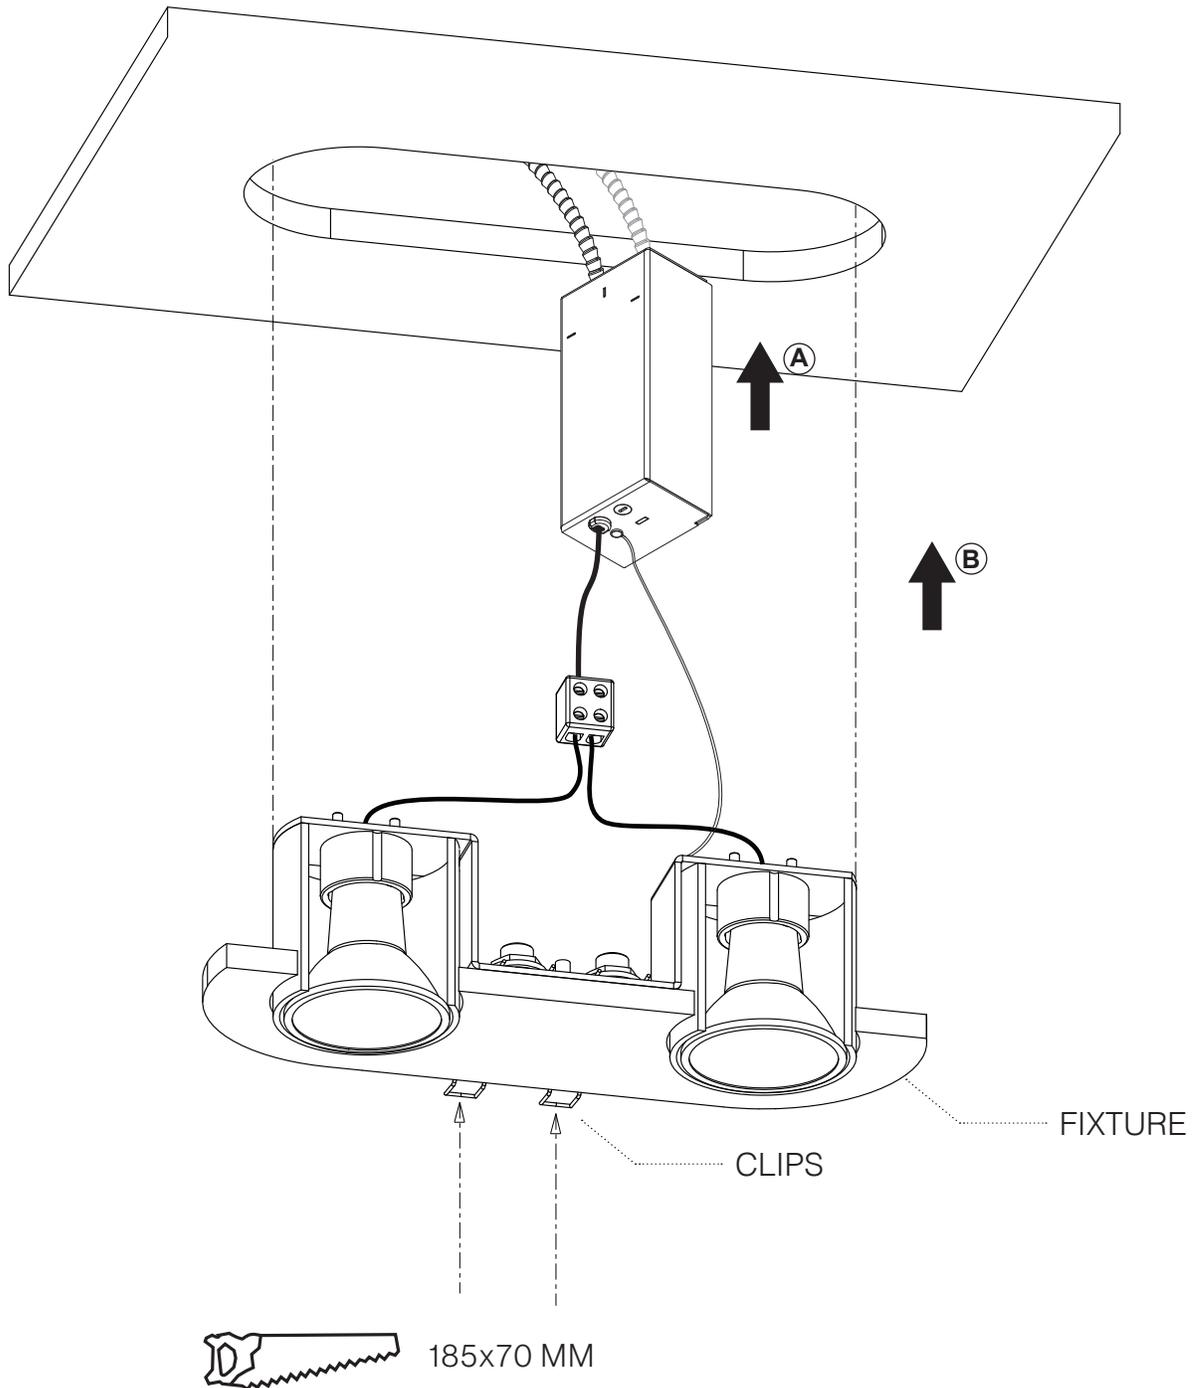

INSTALLATION SHEET

Luminart®

WWW.LUMINARTLIGHTING.COM


SHUFFLE™ RECESSED

INSTALLATION INSTRUCTIONS

TYPE:

PROJECT NAME:

- A- LOOSEN THE PHILLIPS COVER SCREW AND OPEN THE CONNECTION BOX COVER.
- B- INSTALL BX CABLE (NOT INCLUDED) WITH 6" OF WIRE IN THE CONNECTION BOX.
* **AN ADDITIONAL BX CABLE MUST BE INSTALLED FOR DIMMING WIRING.**
- C- MAKE ALL NECESSARY CONNECTIONS (SEE WIRING DIAGRAM BELOW) USING TWIST CONNECTOR (NOT INCLUDED).
- D- CLOSE THE CONNECTION BOX COVER AND FASTEN THE COVER SCREW.

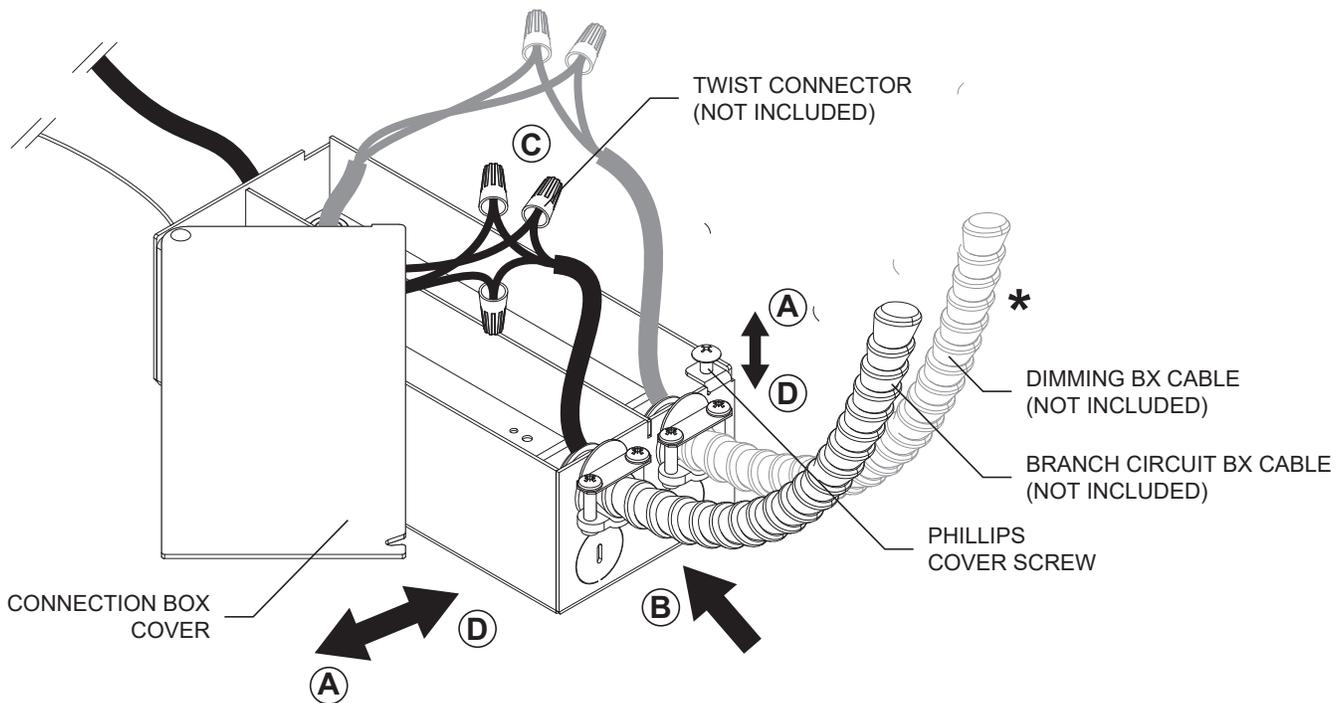

WIRING DIAGRAM

