


FREEDOM LINE™

INSTALLATION INSTRUCTIONS

TYPE:

PROJECT NAME:


- 1 LAY THE SYSTEM ON THE FLOOR LEVEL, AND MARK THE CABLE GRIPPER POSITIONS ON THE CEILING BY USING LAZER POINTER.

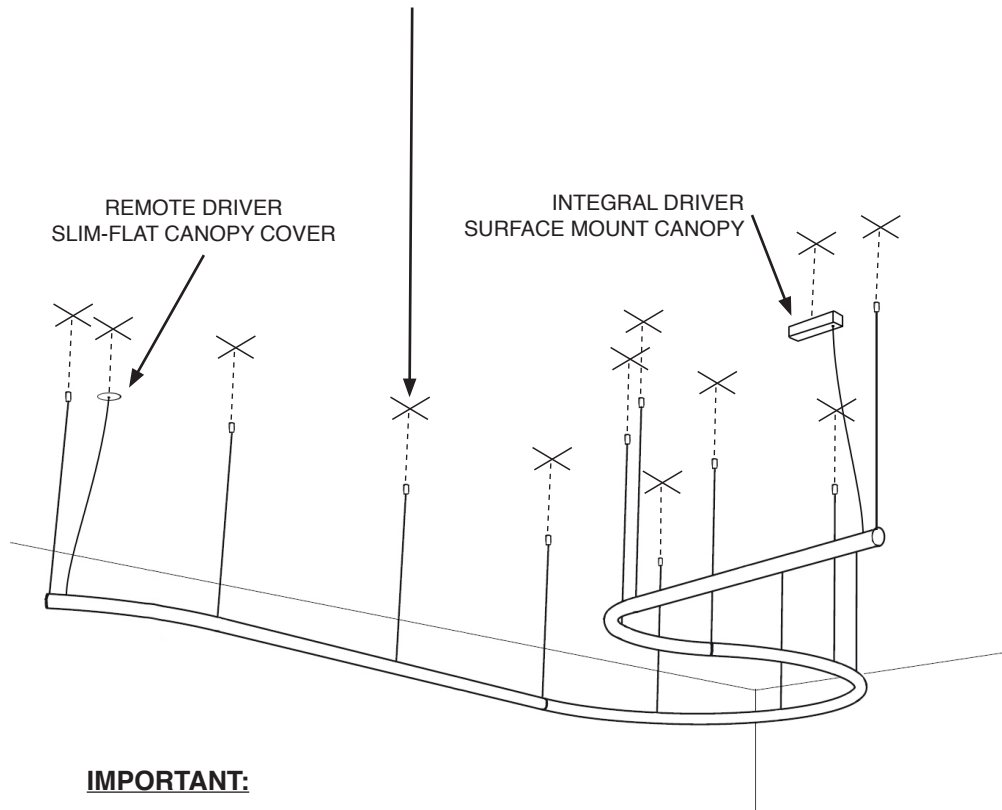

IMPORTANT:



- ALL SECTIONS MUST BE LEVELLED HORIZONTALLY.
- ALL AIRCRAFT CABLES MUST BE POSITIONED PERFECTLY VERTICAL.
- LEVEL ALL SECTIONS BY ADJUSTING CABLE LENGTHS..
- IF THESE CONDITIONS ARE NOT SATISFIED THEN THE DIFFERENT SECTIONS WILL SETTLE TO DIFFERENT LEVELS.
- **DO NOT POWER THE FIXTURE BEFORE ALL SECTIONS ARE PROPERLY INSTALLED.**

- 2 MOUNT CABLE GRIPPER SOCKETS TO MARKED POSITIONS ON THE CEILING AND SCREW THE GRIPPERS IN.

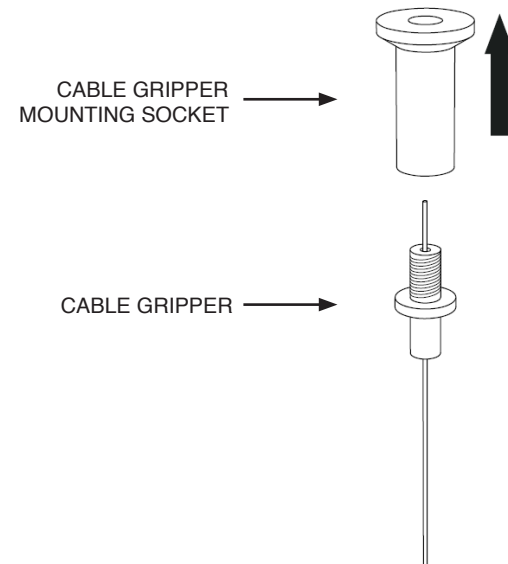

ROUGH IN THE JBOX PER YOUR DESIGN LOCATION.

3

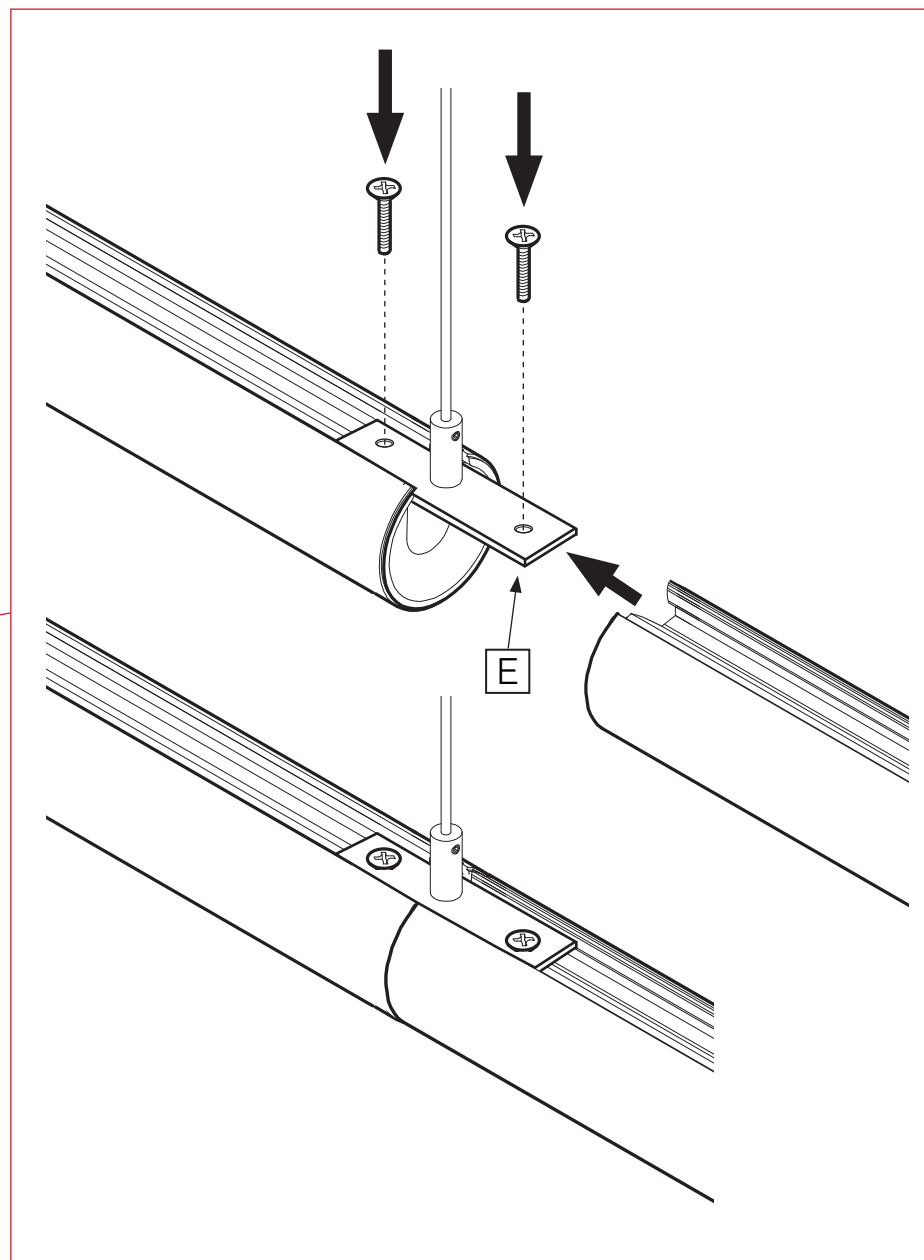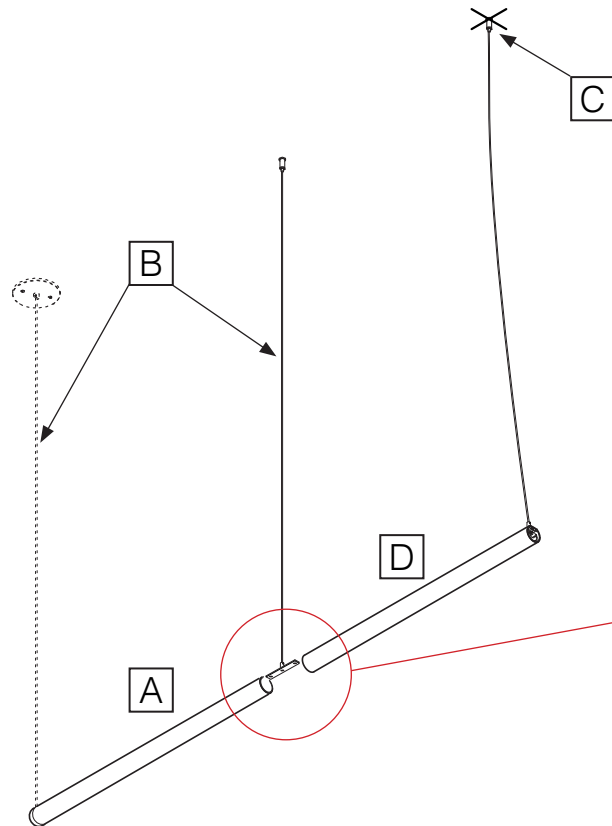


- MAKE THE CONNECTIONS BETWEEN MODULE SECTIONS, AND INSTALL THE SECTIONS ONE AT A TIME.
- MAKE SURE THE FIRST SECTION (A) HAS THE AIRCRAFT CABLES (B) INSTALLED, AND THE SECTION IS SUPPORTED.
- MOUNT THE NEXT GRIPPER (C) TO THE MARKED POSITION.
- CONNECT SECTION (D) TO SECTION (A) BY USING THE CONNECTOR BRACKET (E). AND SCREW THE CONNECTOR TO THE SECTIONS.
- **DO NOT POWER THE FIXTURE BEFORE ALL SECTIONS ARE PROPERLY INSTALLED.**

4a

REMOTE DRIVER INSTALLATION WITH SLIM-FLAT CANOPY COVER.


REMOTE DRIVER INSTALLATION

- DO NOT POWER THE FIXTURE BEFORE ALL SECTIONS ARE PROPERLY INSTALLED.

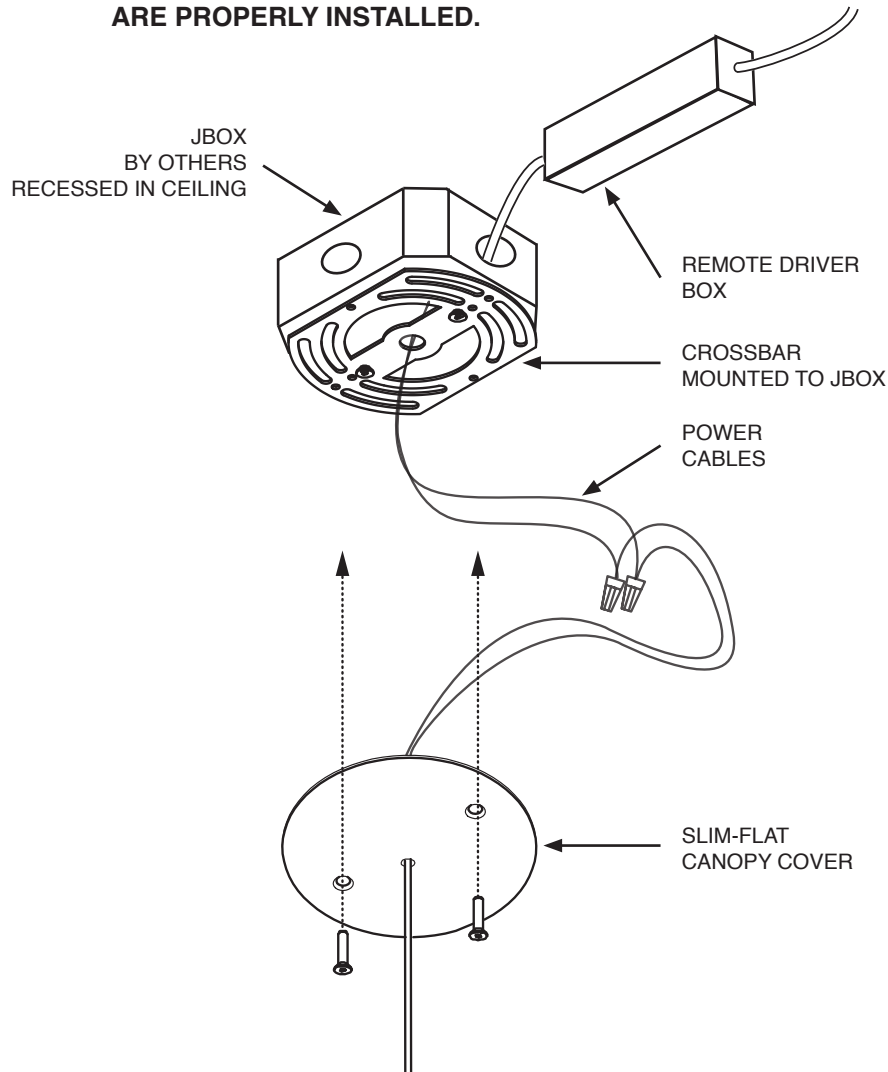


WIRING DIAGRAM

DIMMING 120V ONLY
TRIAC (LTE)

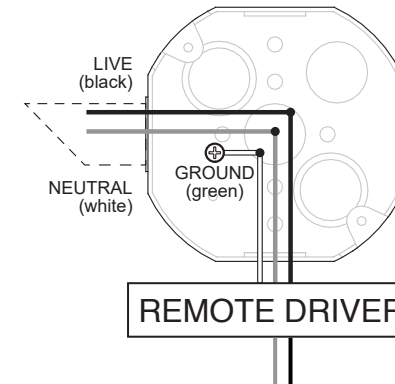

WIRING DIAGRAM

DIMMING 120-277V
0-10V

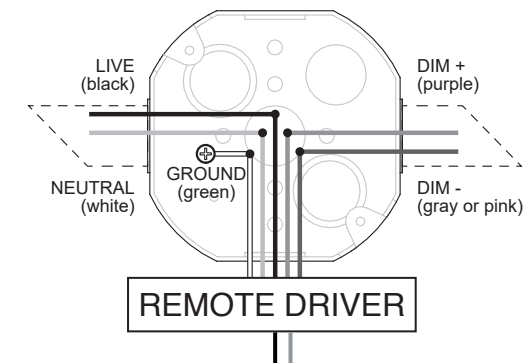





*Junction box for reference only

4b

INTEGRAL DRIVER INSTALLATION WITH SURFACE MOUNT DRIVER CANOPY.


INTEGRAL DRIVER INSTALLATION

- DO NOT POWER THE FIXTURE BEFORE ALL SECTIONS ARE PROPERLY INSTALLED.

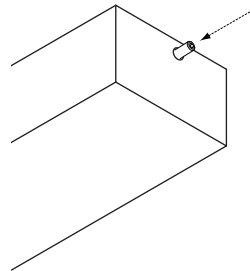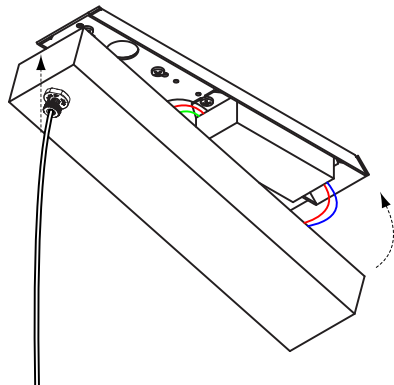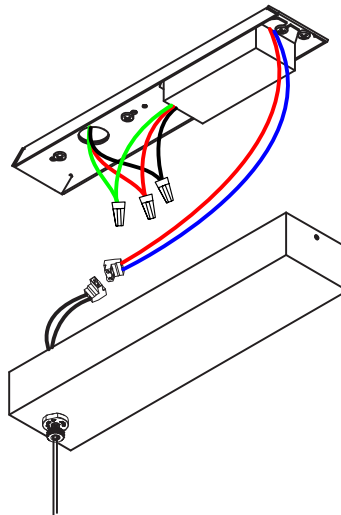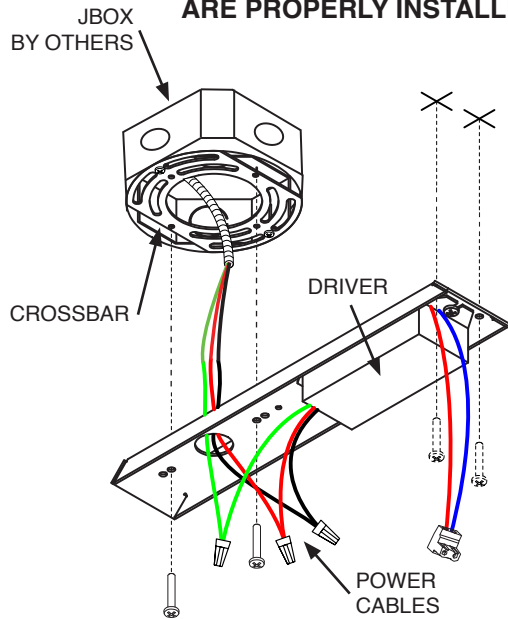


WIRING DIAGRAM

DIMMING 120V ONLY
TRIAC (LTE)

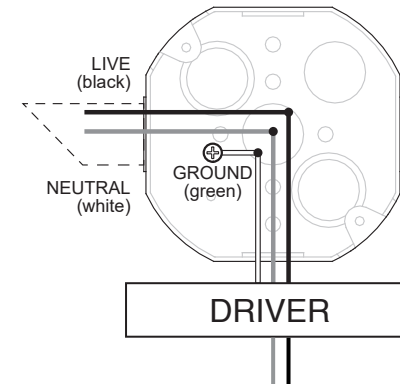

WIRING DIAGRAM

DIMMING 120-277V
0-10V

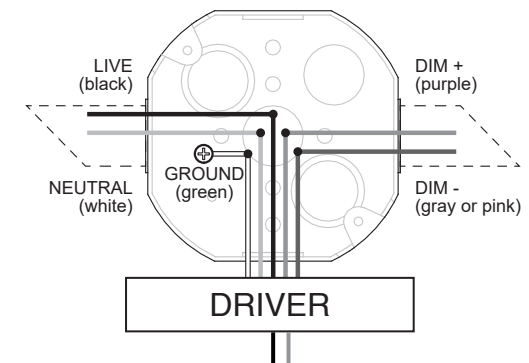

*Junction box for reference only