

# BIG-O OVAL™

## INSTALLATION INSTRUCTIONS

TYPE:


PROJECT NAME:

1

LAY THE FIXTURE ON THE FLOOR LEVEL, AND MARK THE CABLE GRIPPER POSITIONS ON THE CEILING BY USING LAZER POINTER.

### **IMPORTANT:**

- FIXTURE MAY COMES WITH 2 OR MORE SECTIONS.
- FIXTURE MUST BE LEVELLED HORIZONTALLY.
- ALL AIRCRAFT CABLES MUST BE POSITIONED PERFECTLY VERTICAL.
- LEVEL THE FIXTURE BY ADJUSTING CABLE LENGTHS.
- **DO NOT POWER THE FIXTURE BEFORE ALL SECTIONS ARE PROPERLY INSTALLED.**

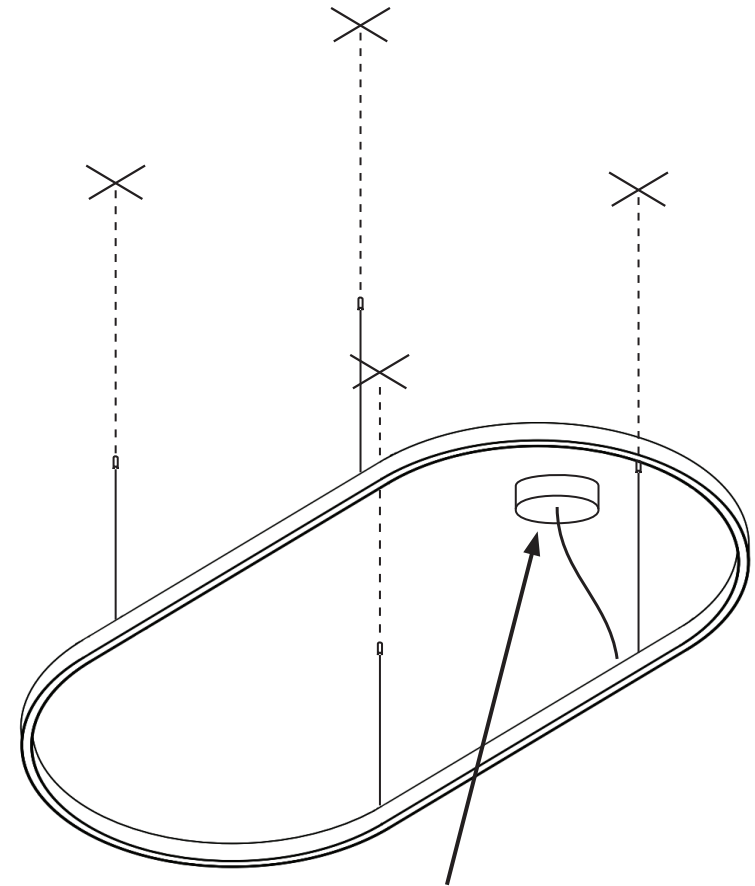

INTEGRAL DRIVER  
SURFACE MOUNT CANOPY


# BIG-O OVAL™

## INSTALLATION INSTRUCTIONS

TYPE:

PROJECT NAME:


- 2** MOUNT CABLE GRIPPER SOCKETS TO MARKED POSITIONS ON THE CEILING AND SCREW THE GRIPPERS IN.

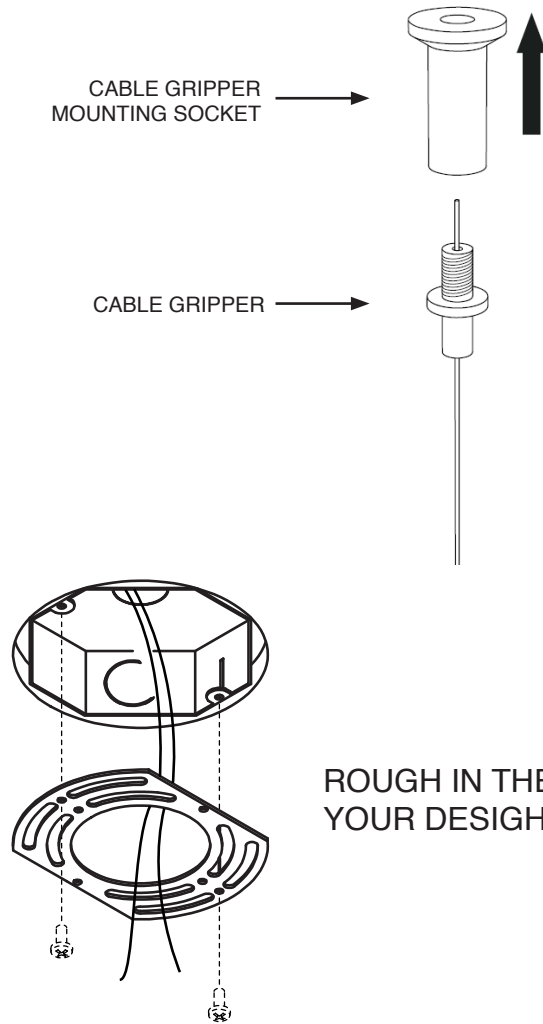

ROUGH IN THE JBOX PER YOUR DESIGN LOCATION.

- 3** INSTALLATION NOTE:

CONNECTS THE SECTIONS WHEN THE FIXTURE COMES WITH 2 OR MORE PIECES.

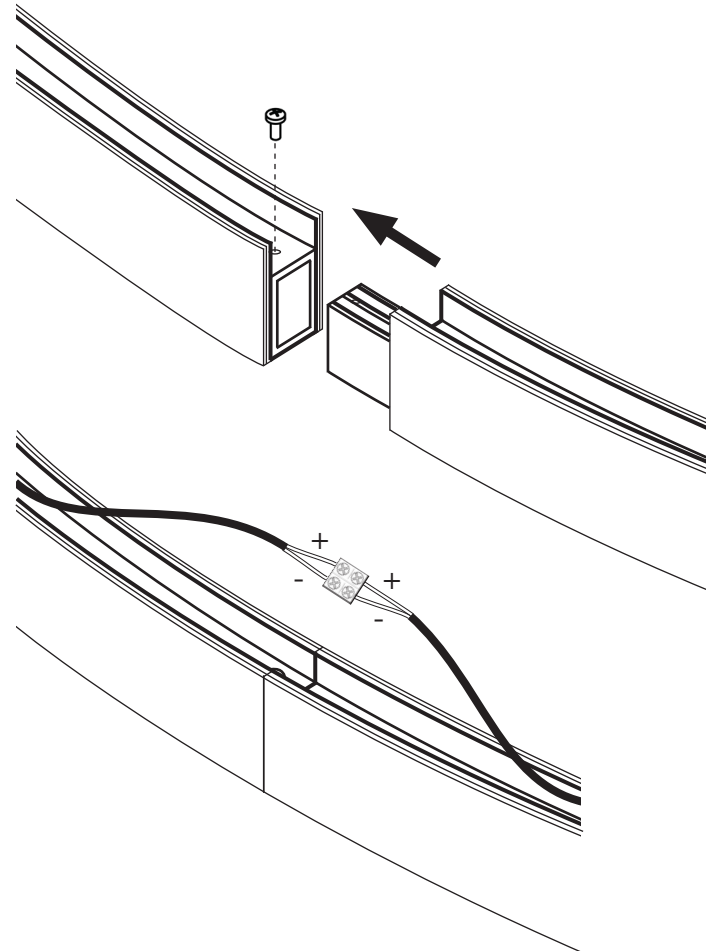


- 4** MAKE WIRING CONNECTIONS BETWEEN THE TWO SECTIONS

5

### INTEGRAL DRIVER INSTALLATION WITH SURFACE MOUNT DRIVER CANOPY.


#### INTEGRAL DRIVER INSTALLATION

- DO NOT POWER THE FIXTURE BEFORE ALL SECTIONS ARE PROPERLY INSTALLED.

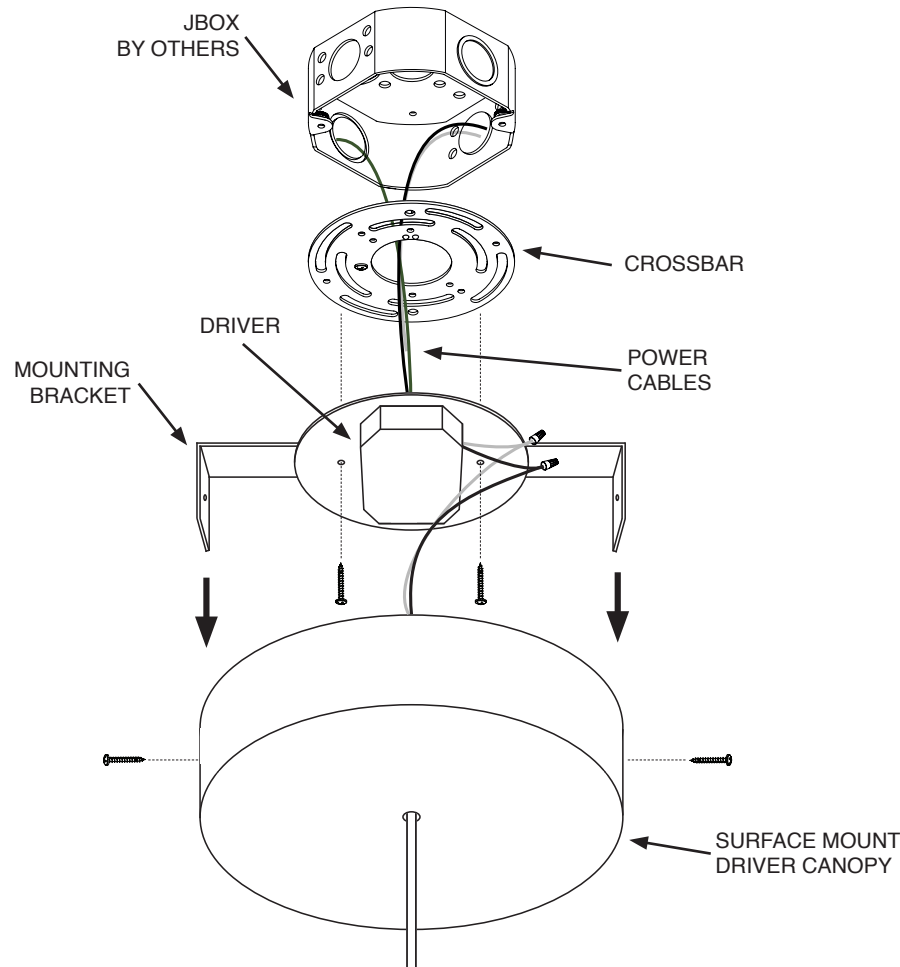


#### WIRING DIAGRAM

DIMMING 120V ONLY  
TRIAC (LTE)

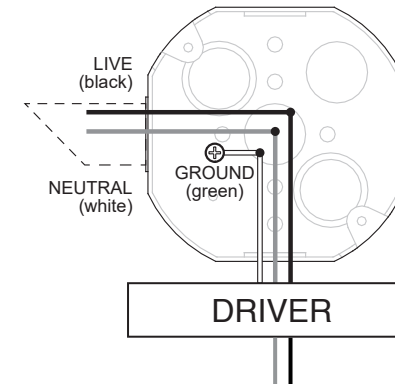

#### WIRING DIAGRAM

DIMMING 120-277V  
0-10V

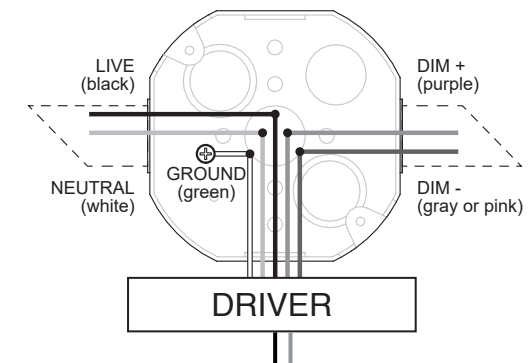

\*Junction box for reference only