

BIG-O SQUARE/RECTANGLE™

INSTALLATION INSTRUCTIONS

TYPE:


PROJECT NAME:

1

LAY THE FIXTURE ON THE FLOOR LEVEL, AND MARK THE CABLE GRIPPER POSITIONS ON THE CEILING BY USING LAZER POINTER.

IMPORTANT:

- FIXTURE MAY COMES WITH 2 OR MORE SECTIONS.
- FIXTURE MUST BE LEVELLED HORIZONTALLY.
- ALL AIRCRAFT CABLES MUST BE POSITIONED PERFECTLY VERTICAL.
- LEVEL THE FIXTURE BY ADJUSTING CABLE LENGTHS.
- **DO NOT POWER THE FIXTURE BEFORE ALL SECTIONS ARE PROPERLY INSTALLED.**

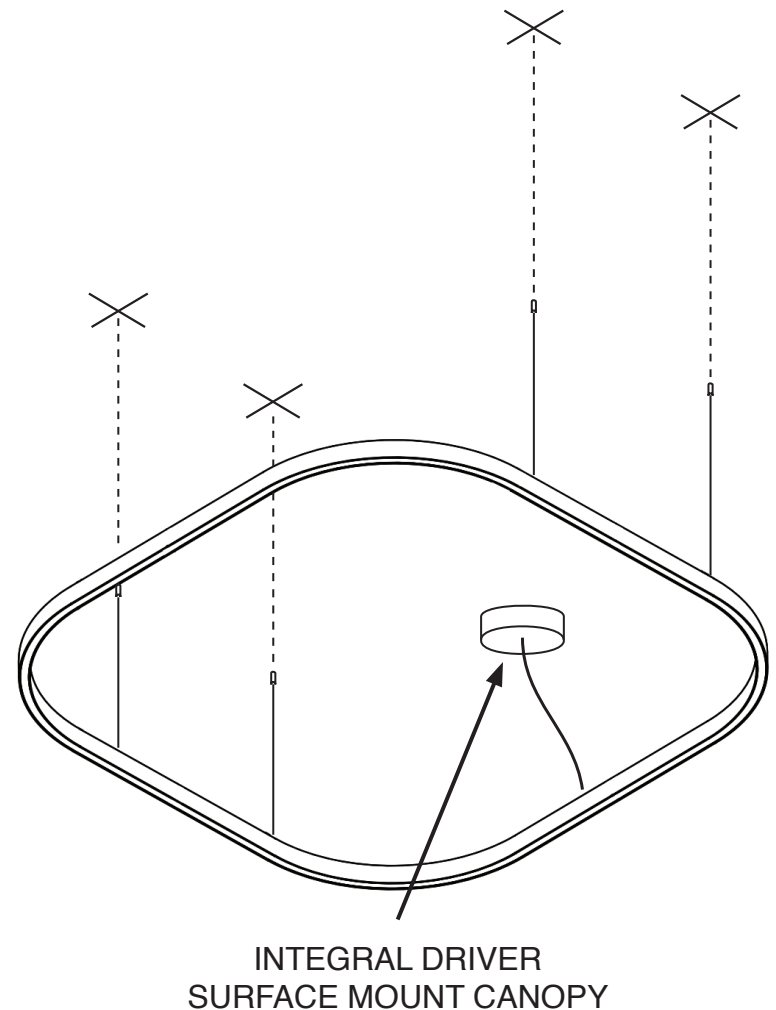


BIG-O SQUARE/RECTANGLE™

INSTALLATION INSTRUCTIONS

TYPE:


PROJECT NAME:

- 2** MOUNT CABLE GRIPPER SOCKETS TO MARKED POSITIONS ON THE CEILING AND SCREW THE GRIPPERS IN.

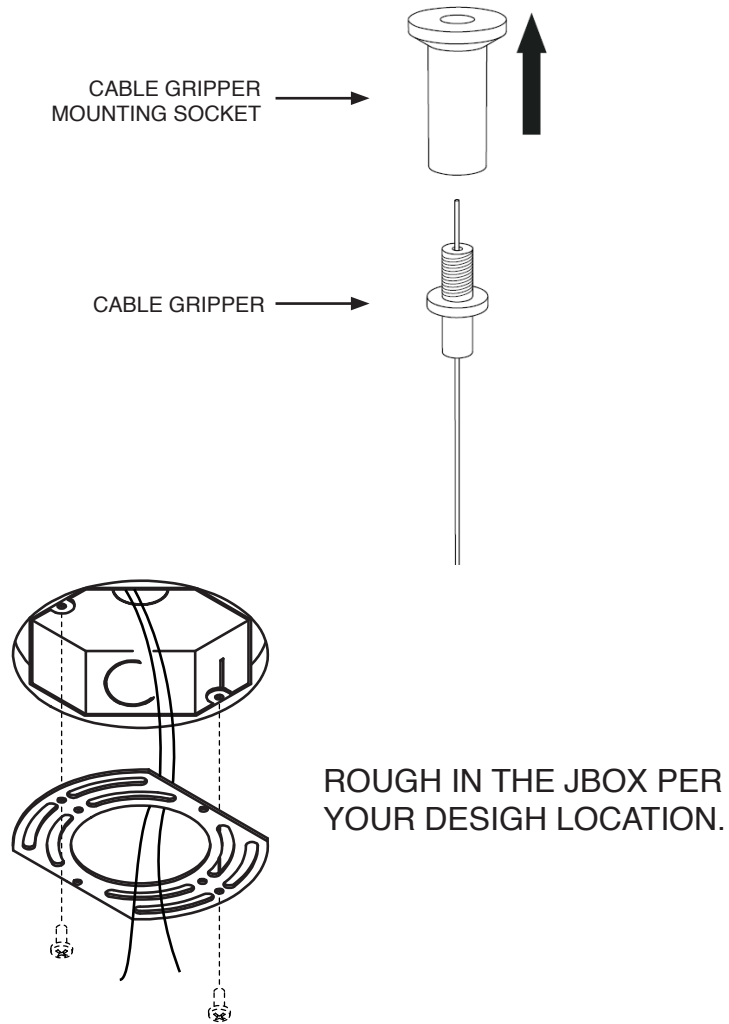

- 3** INSTALLATION NOTE:

CONNECTS THE SECTIONS WHEN THE FIXTURE COMES WITH 2 OR MORE PIECES.

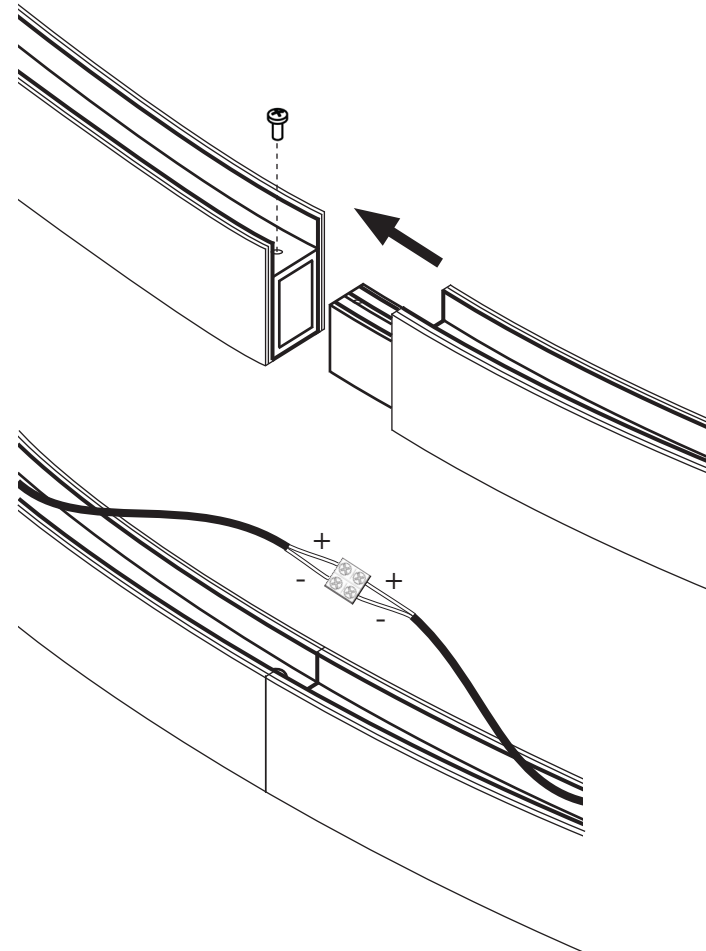

- 4** MAKE WIRING CONNECTIONS BETWEEN THE TWO SECTIONS

BIG-O SQUARE/RECTANGLE™

INSTALLATION INSTRUCTIONS

TYPE:


PROJECT NAME:

5

INTEGRAL DRIVER INSTALLATION WITH SURFACE MOUNT DRIVER CANOPY.


INTEGRAL DRIVER INSTALLATION

- DO NOT POWER THE FIXTURE BEFORE ALL SECTIONS ARE PROPERLY INSTALLED.

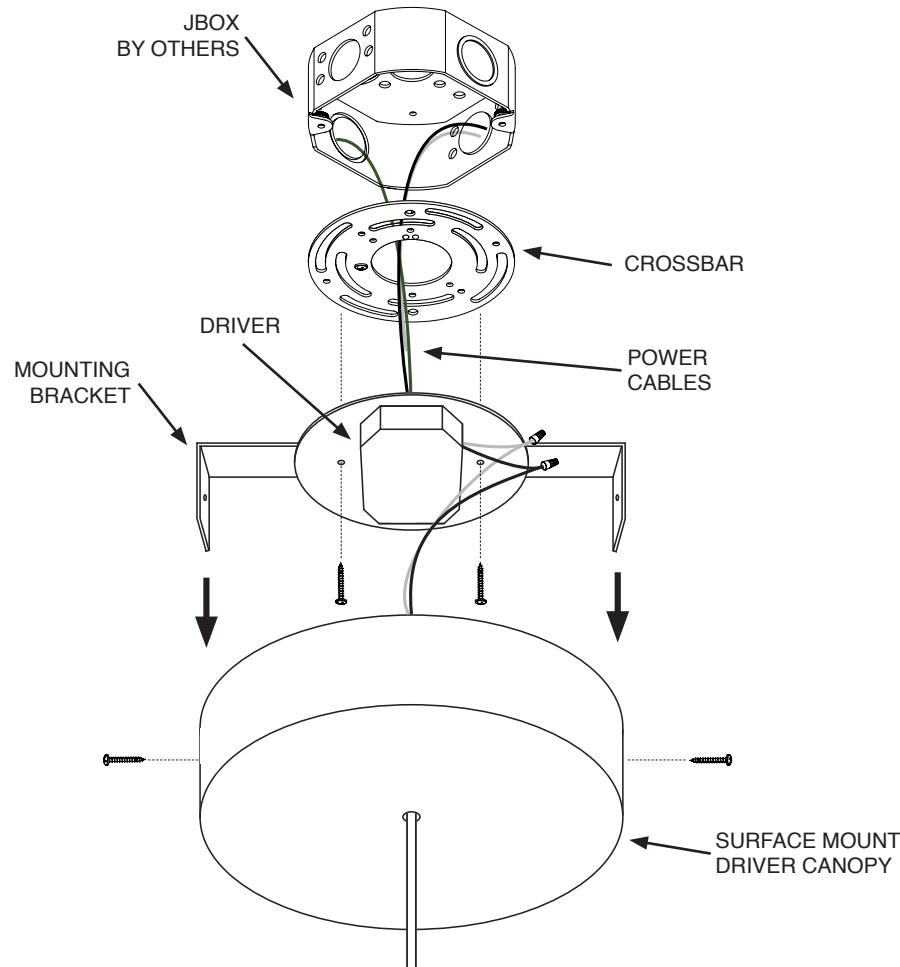


WIRING DIAGRAM

DIMMING 120V ONLY
TRIAC (LTE)

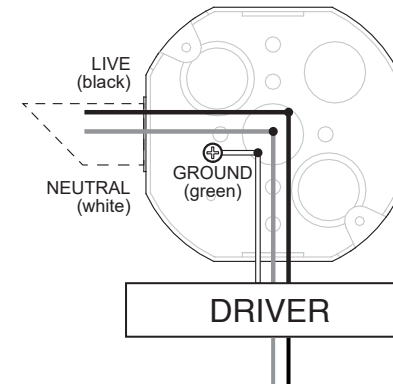

WIRING DIAGRAM

DIMMING 120-277V
0-10V

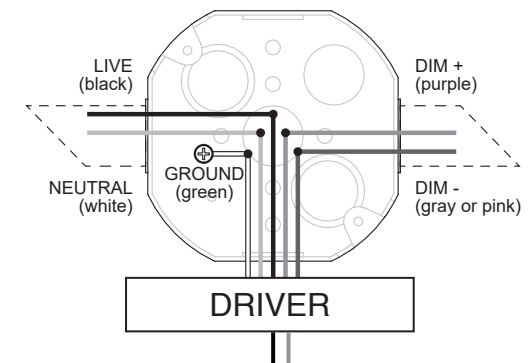

* Junction box for reference only