

# SOL RD

## INSTALLATION INSTRUCTIONS

TYPE:


PROJECT NAME:




The connection should be made with the mains voltage disconnected

- 1 Prepare mounting holes for anchors at the specified spacing.


- 1a Sol 1050

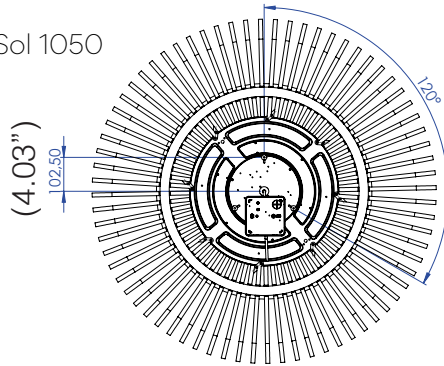


- 1b Sol 1200

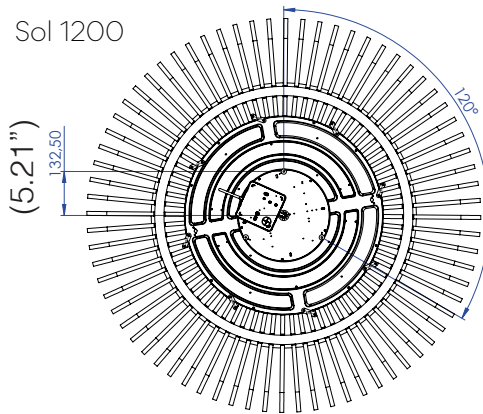

- 1c Sol 1500

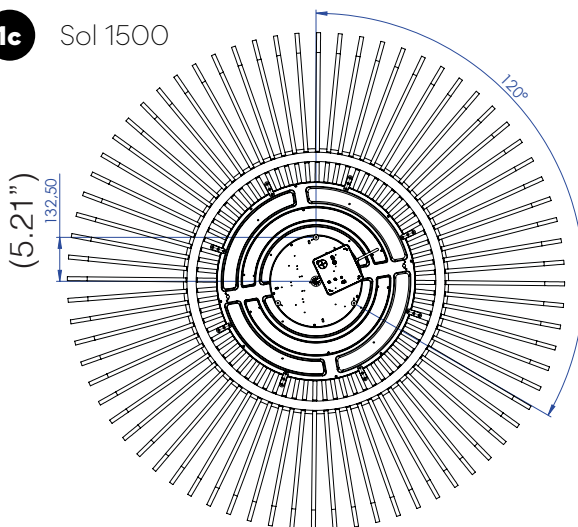


- 2 Install the canopy.

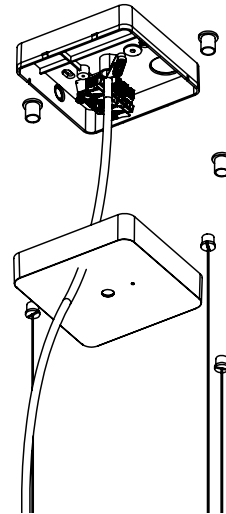


- 3 Attach suspension cables to the fixture.

- 4 Level the fixture.

- 5 Connect the power supply to the canopy.

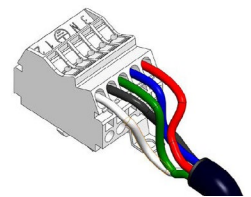

- 6 Close the canopy cover.

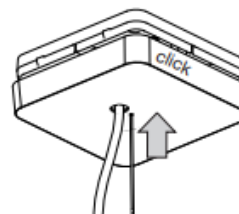

Before switching on the mains voltage, make sure that all connections are correct