


# TKO BOLLARD

## INSTALLATION INSTRUCTIONS


TYPE:

PROJECT NAME:

For concrete installation.  
Drill holes 100mm (3.93") deep  
using a 6.6mm or 1/4" drill bit.

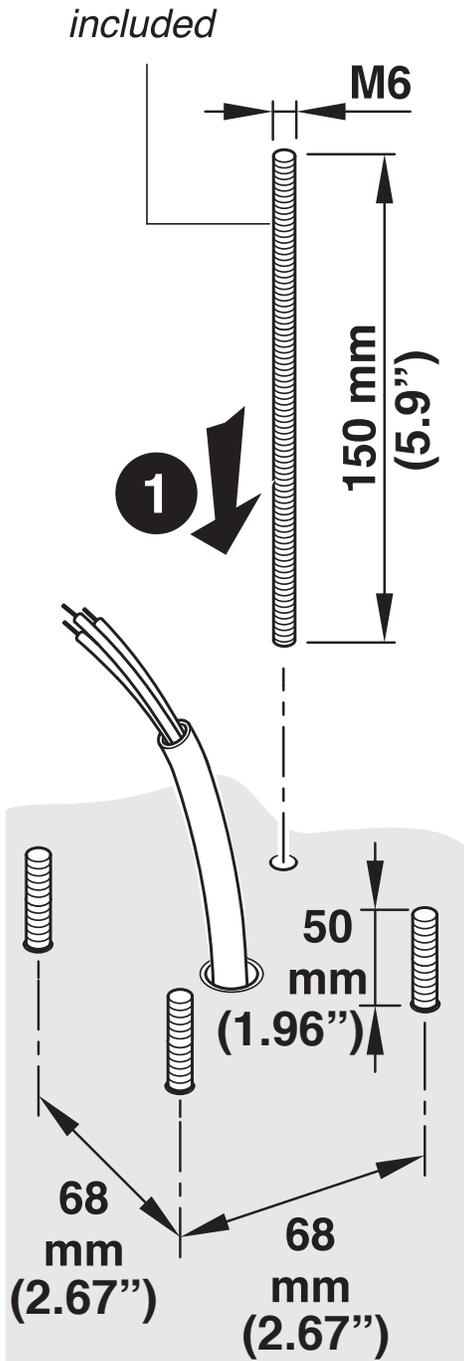

Ensure studs are positioned  
correctly before securing.  
Structural epoxy is recommended  
to secure the studs permanently.

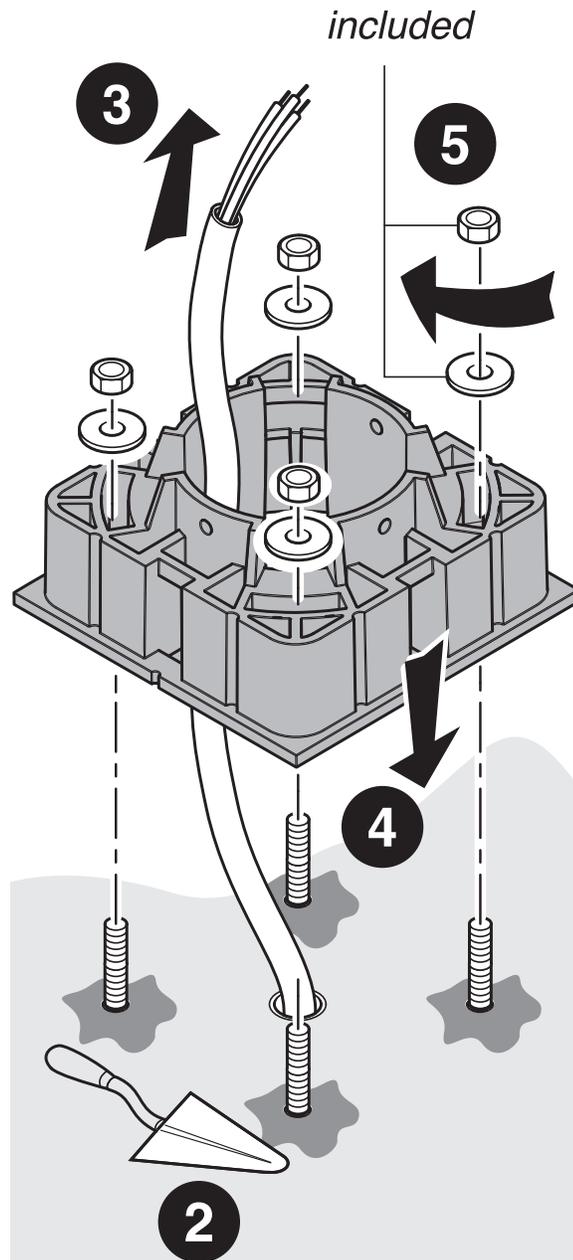


# TKO BOLLARD

## INSTALLATION INSTRUCTIONS

TYPE:

PROJECT NAME:

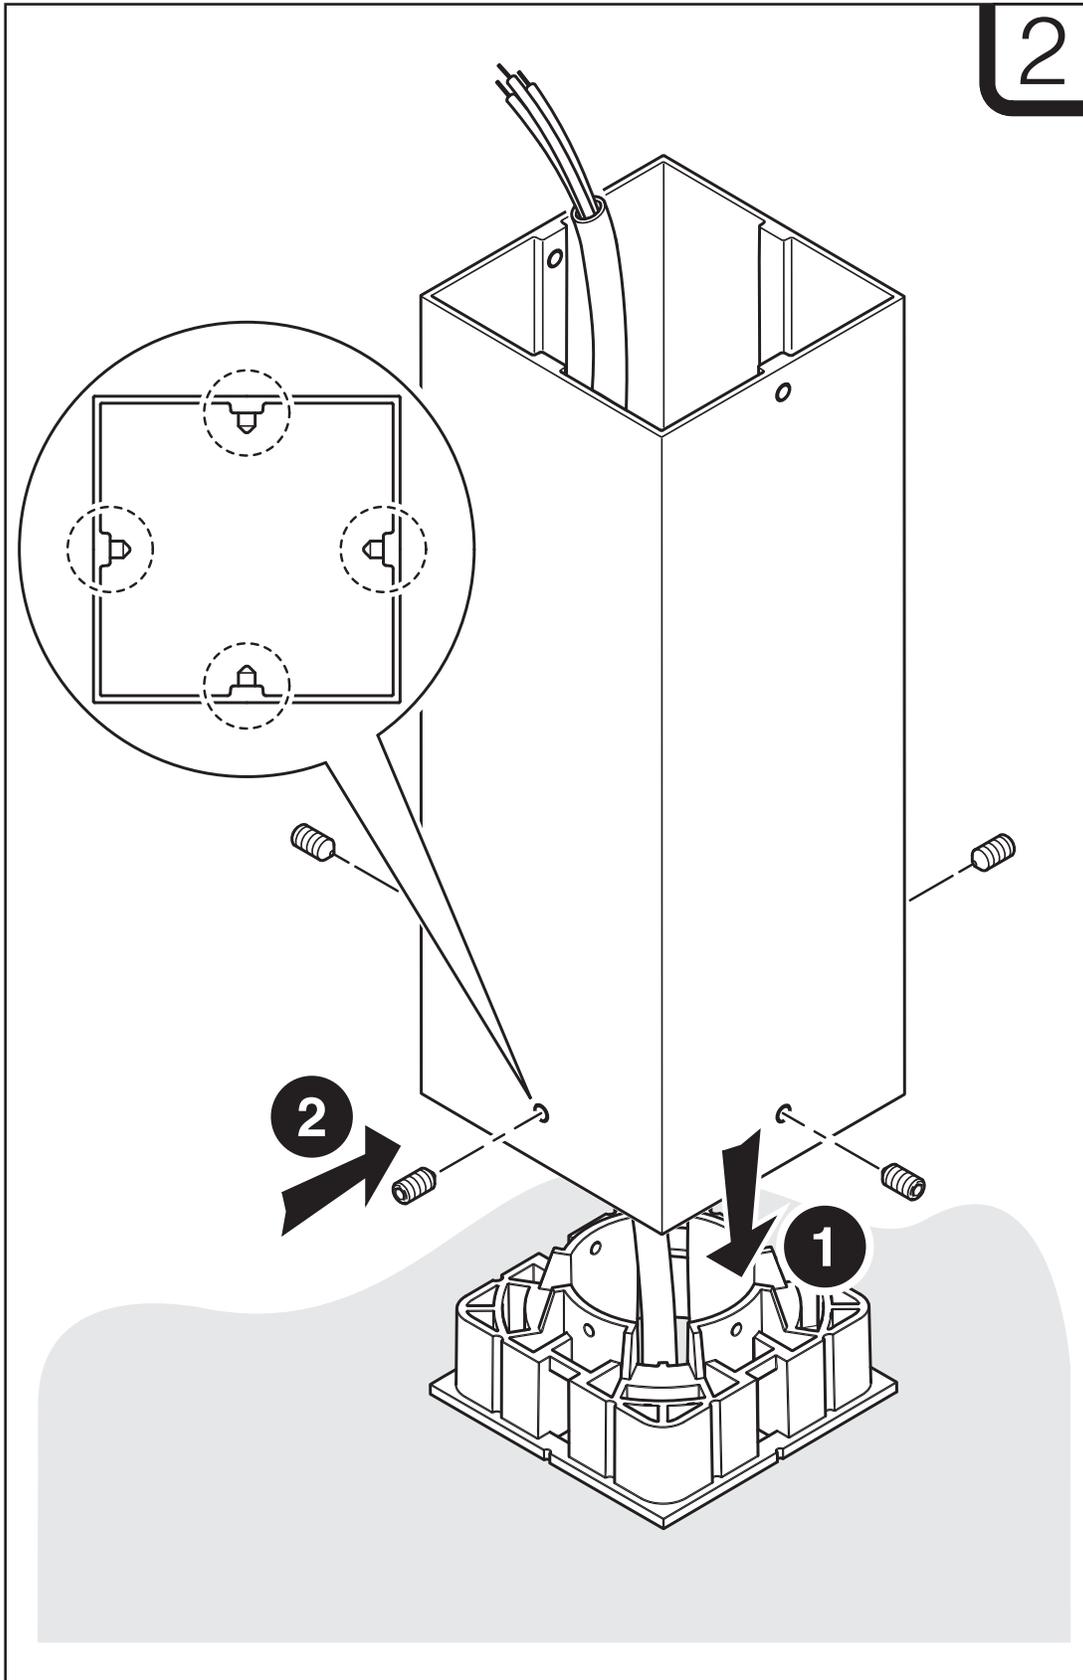


# TKO BOLLARD

## INSTALLATION INSTRUCTIONS

TYPE:

PROJECT NAME:

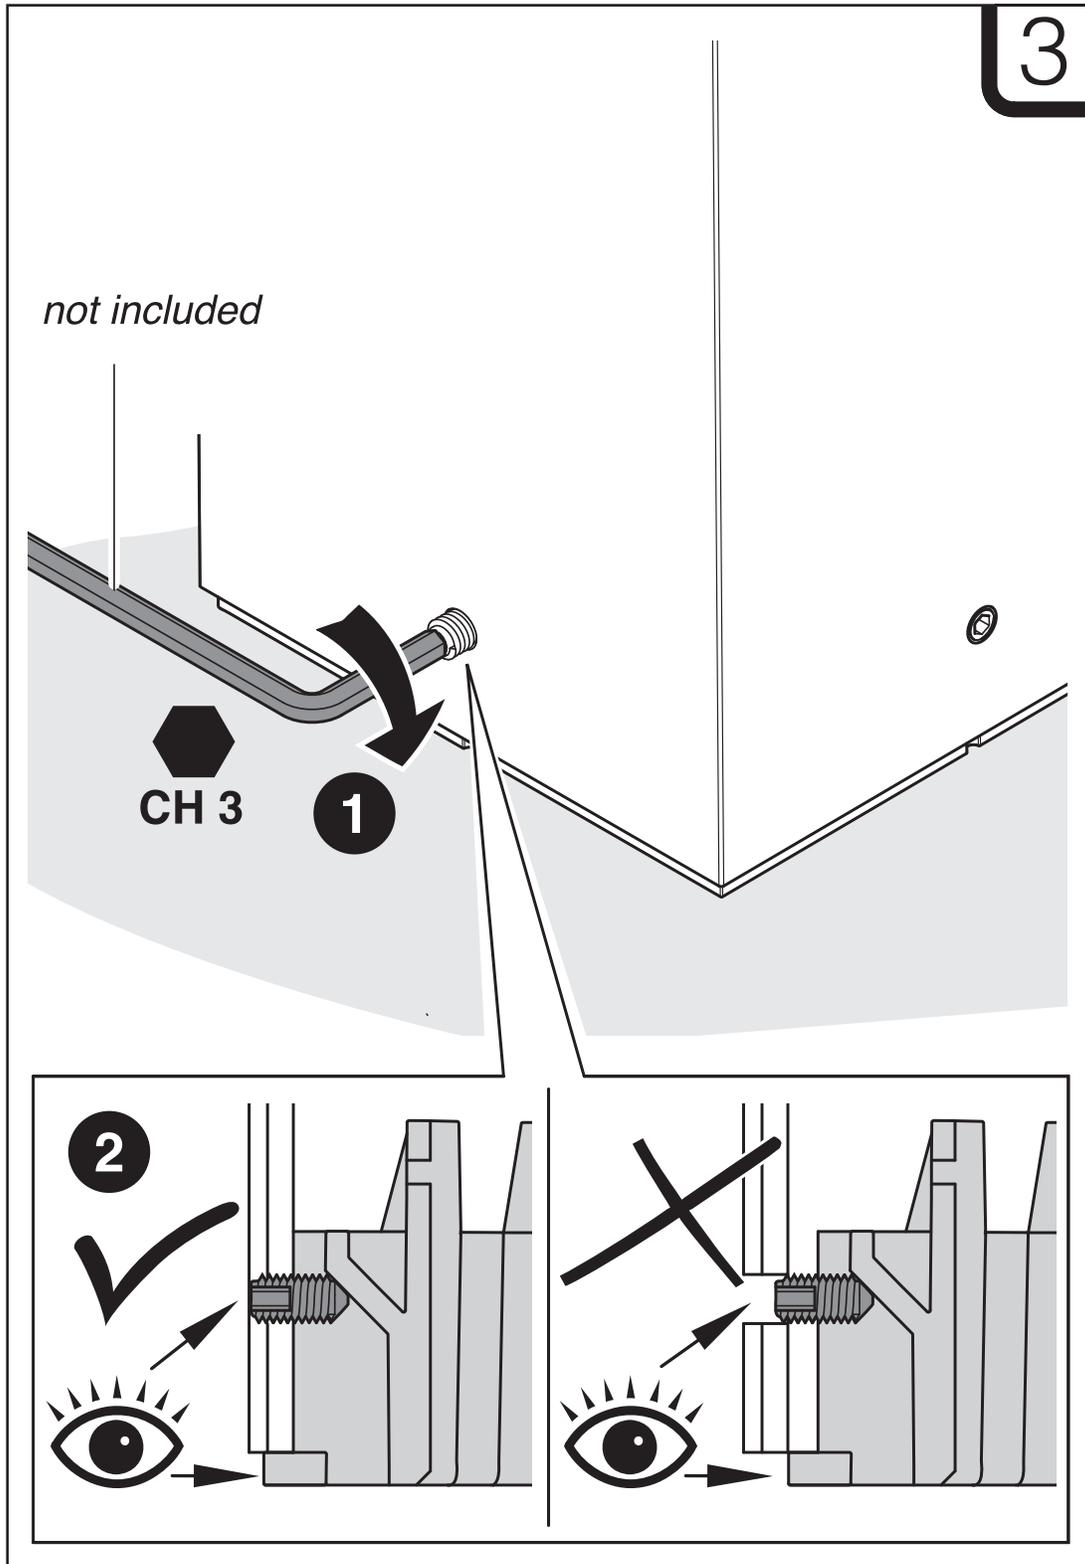

# TKO BOLLARD

## INSTALLATION INSTRUCTIONS

TYPE:

PROJECT NAME:

