POP™ 12 Ø 03

INSTALLATION INSTRUCTIONS

TYPE:

PROJECT NAME:

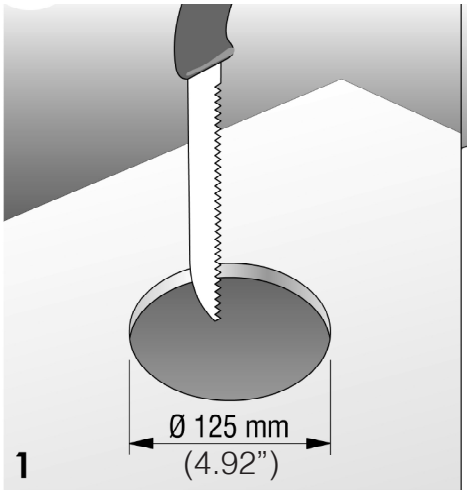

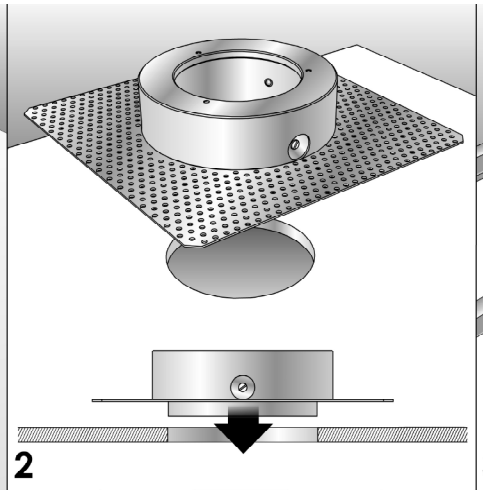

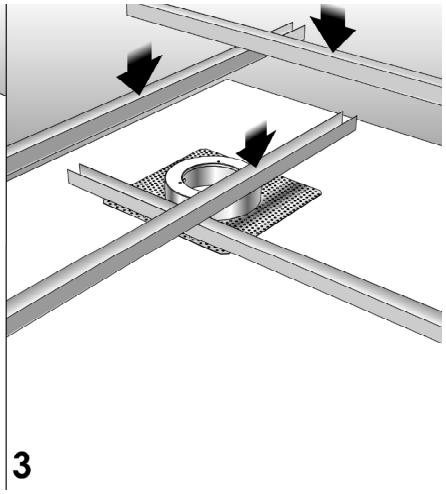

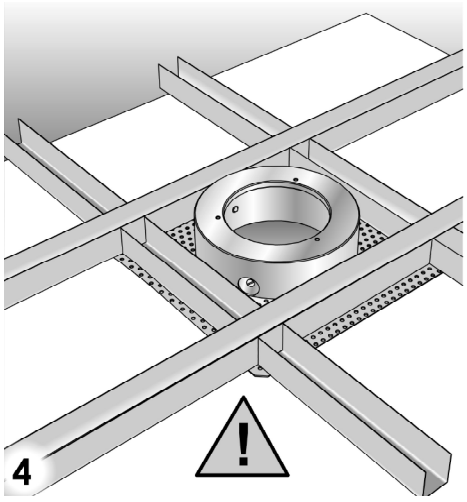

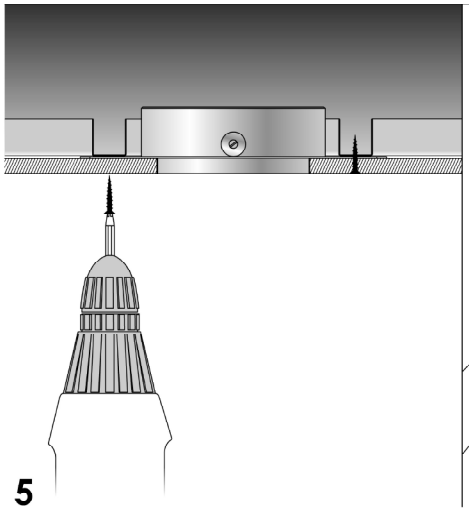

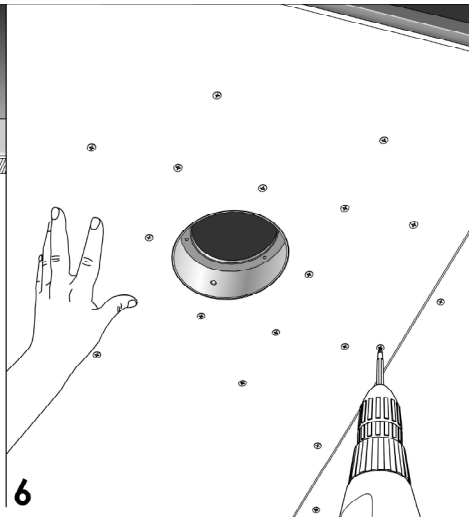

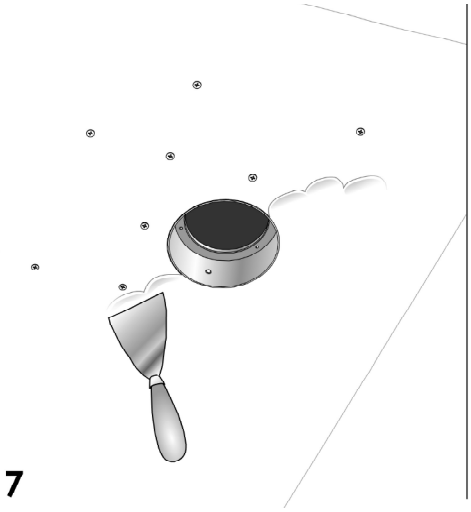

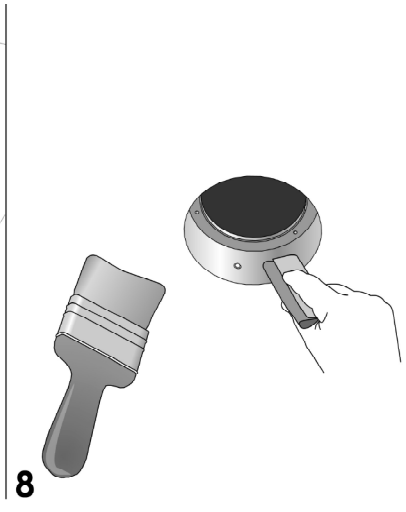

1) Once pointed the position of the lamp, cut the hole for the housing.

2) Place the housing on the side of the plasterboard plate that will remain invisible after the work is done.

3-4) Put some metal profiles to fix and reinforce the area of the housing.

5) Fix with screws, the housing to the plasterboard and to the reinforcement profiles.

6-7) Complete the false ceiling, plaster and trim.

8) Keep clean the inside of the housing.

INSTALLATION SHEET

POP™ 12 Ø 03

INSTALLATION INSTRUCTIONS

TYPE:

PROJECT NAME:

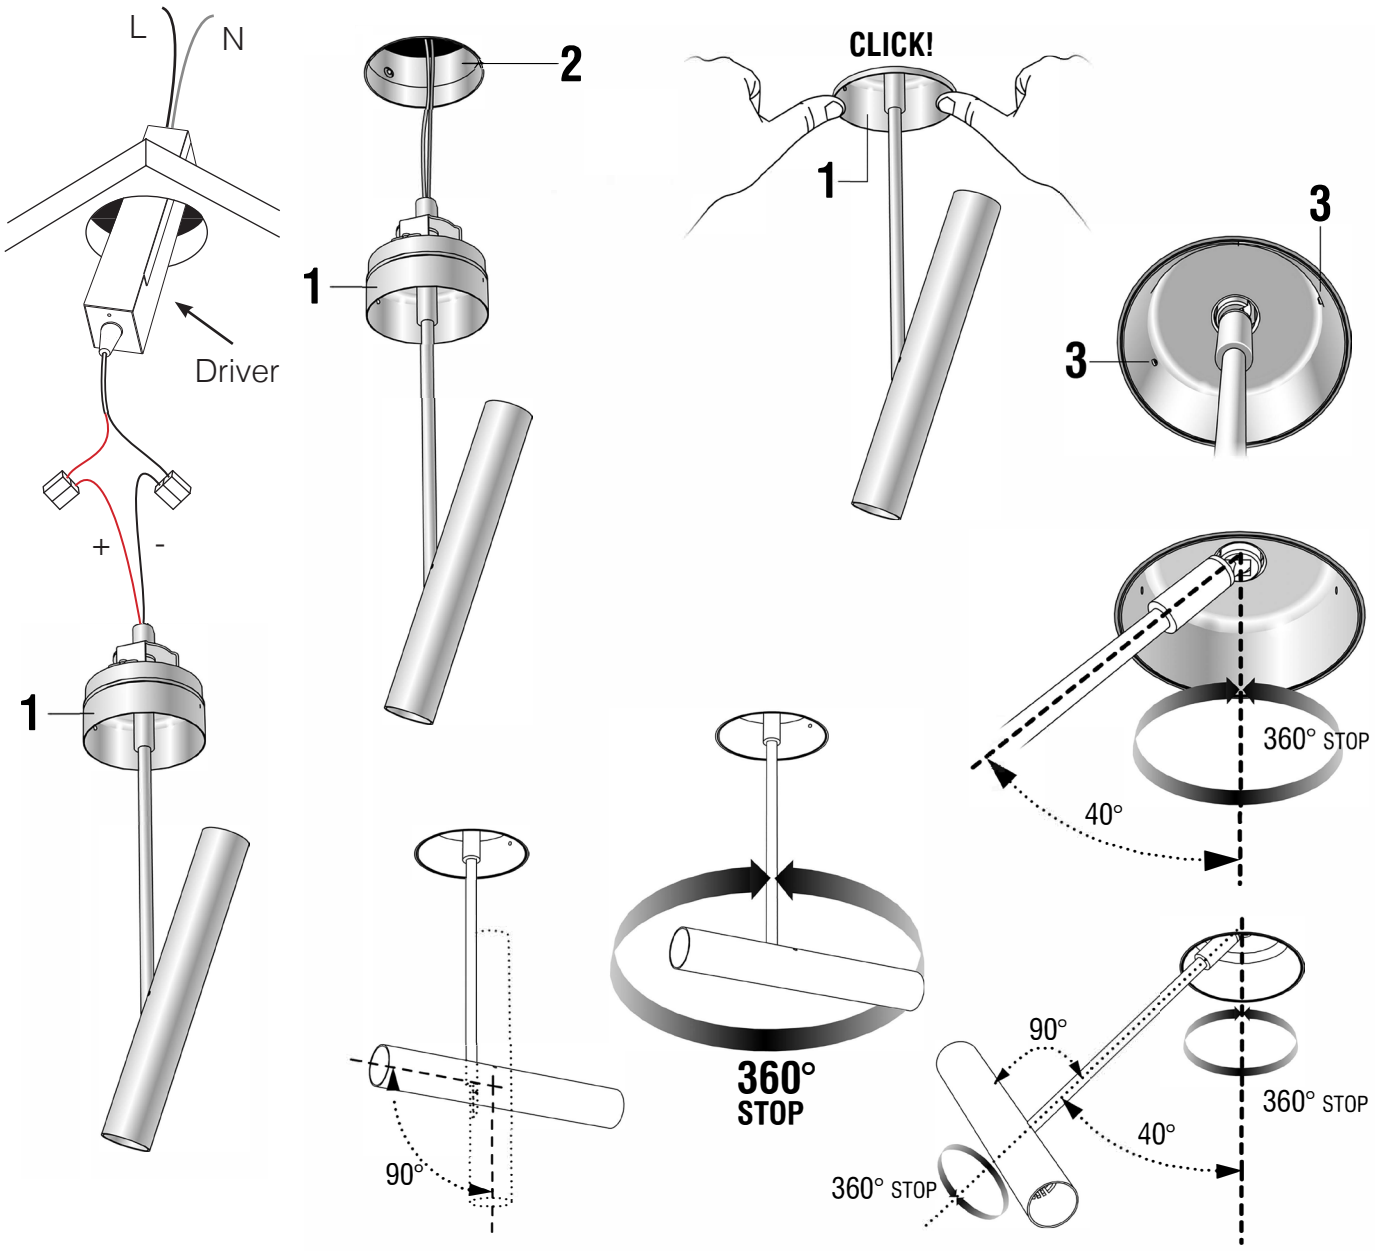

INSTALLATION SHEET

-Make the connections to the driver with connecters.

-Insert the lamp (1) in the housing beforehand built into the ceiling (2).

-Fasten the safety screws (3) with the given key.

-Adjust the lamp, tilting and rotating it, as required.