VICTOR C1S™

INSTALLATION INSTRUCTIONS

TYPE:

PROJECT NAME:

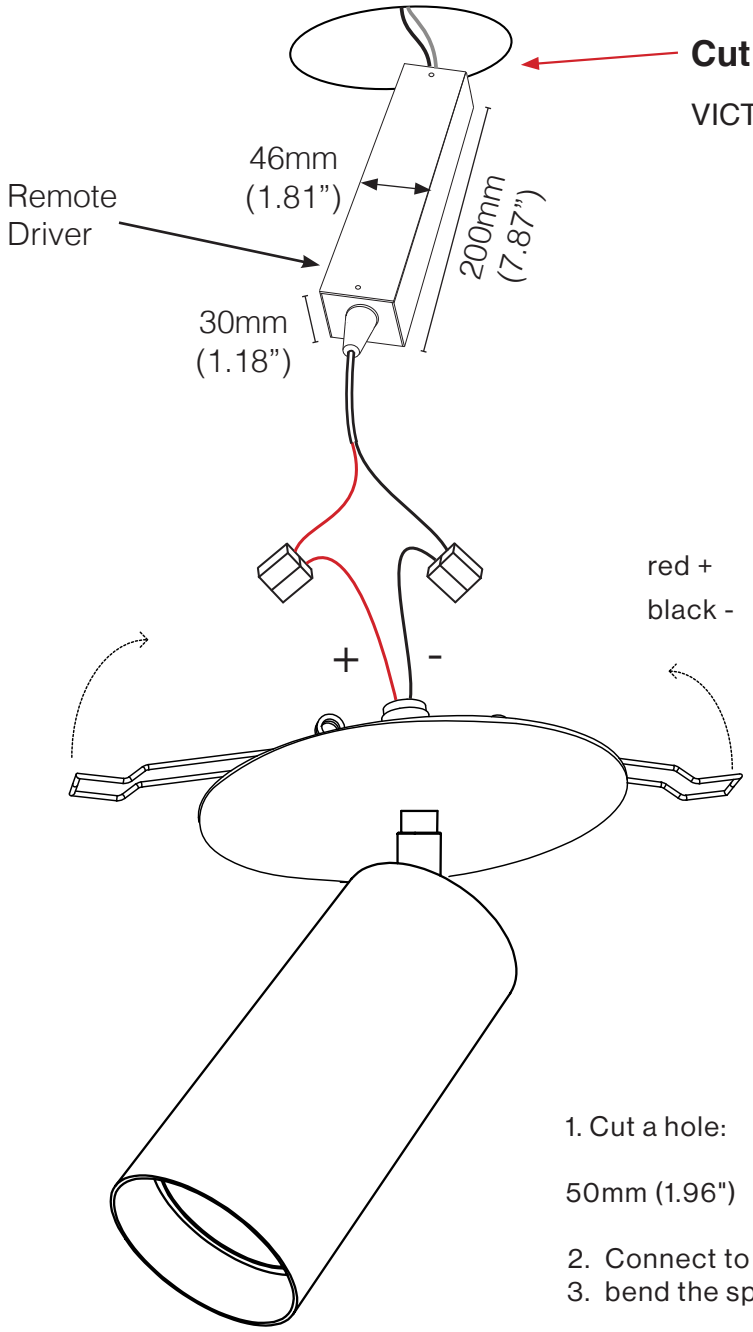

Cut Hole Sizes:

VICTOR C1S: Ø 50mm (1.96”)

1. Cut a hole:

50mm (1.96")

2. Connect to the remote driver - 6W 350mA
3. bend the springs together and insert them in a hole

INSTALLATION SHEET